

SmartTemp sensor batteries can be replaced by following the below instructions:

1. Using a small screwdriver, lift the lid from the recess side.



2. Carefully lift the board with the electronics. Replace the CR2477 battery.



3. Align the groove in the PCB with two pieces of plastic.



4. Align the button on the PCB with the button on the base of the sensor Press the base down until it is locked.

