

ROCKER SWITCH WITH PILOT LIGHT

WARNING


- All electrical work must be done in accordance with local codes, ordinances, or National Electrical Code as applicable. **FOR SAFETY, THIS PRODUCT MUST BE GROUNDED.** If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified electrician.
- Turn off power and lock out service panel before installing, wiring, or servicing this product.
- To prevent serious injury from electrical shock or damage to electrical components - **DO NOT WIRE HOT!**
- A neutral wire is required for proper operation.
- Warranty void if miswired.

INSTALLATION

1. Turn off power and lock out service panel before wiring the control.
2. Install at least a 2 $\frac{3}{4}$ " deep switch box for 14 AWG wire or at least a 3 $\frac{1}{2}$ " deep switch box for 12 AWG wire.
3. Connect cables to switch box and appliance (load) using appropriate connectors. Provide 6" leads inside box and appliance and strip ends 5/8". (Use strip gauge on back of switch.)
4. Make electrical connections following diagram on back. Make sure both the control and the appliance are properly grounded. For side-wiring: Loop wires clockwise, $\frac{3}{4}$ turn around terminal screws. For back-wiring: Insert wires into holes and tighten side screws securely. Wiring clamps must tighten on stripped ends of wire - not on insulation.
5. Tuck wires into switch box and fasten the control to box using attached screws.
6. Fasten the switch plate to the control using the short screws from the parts bag.

WIRING DIAGRAM

WARRANTY

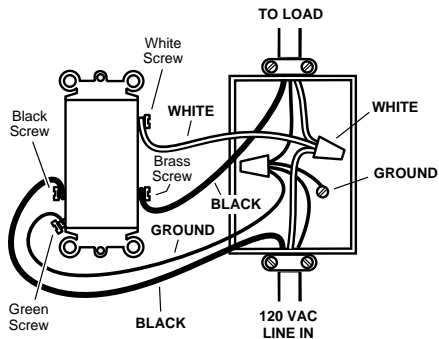

Learn more about [other home heating & cooling by Broan-NuTone on our website.](#)