


# NuTone®

## Model LA227WH Wi-Fi Chime Quick Start Guide

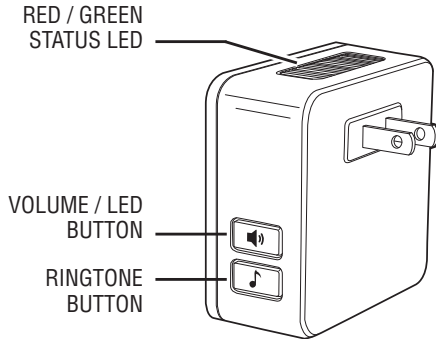

1. Plug the NuTone Wi-Fi Chime into a standard outlet.
2. The LED should begin flashing red and green.
3. In the NuTone Knock app, select “Add a Wi-Fi Chime” from the doorbell settings menu.
4. Follow the on-screen directions to pair your Wi-Fi Chime to your NuTone Knock Smart Video Doorbell.
5. Use the buttons on the NuTone Wi-Fi Chime to adjust volume and select chime tone.

### RINGTONE BUTTON

Short Press to change ringtone. 16 melodies can be selected.

RINGTONE	DESCRIPTION
1 (Default)	Ding Dong
2	Westminster
3	Ding Dong Ding
4	Tubular 1
5	Orchestra
6	Tubular 2
7	Trumpet
8	Dog Barking
9	Bird
10	Mirage
11	“Pang” from Cymbals
12	SO ME DO
13	Knock
14	Cuckoo
15	Old Phone
16	Buzzer



Long Press both buttons together (10 seconds) to reset chime to factory settings.

### VOLUME / LED BUTTON

Short Press to change volume. 4 Volume levels can be selected: High (Default), Mid-High, Mid-Low, Low

Long Press (10 seconds) to turn LED Status Off or On.

LED COLOR	STATUS
Flashing Green / Red	Discovery Mode (AP Mode)
Flashing Red (Slow)	Getting IP from Wi-Fi
Flashing Green (Fast)	Got IP and pairing with Doorbell
Solid Green	Paired with Doorbell Operating Normal Idle state
Flashing Green (Slow) for 10 sec.	Doorbell Call Button is pressed Ringtone is playing
Flashing Red (Fast)	Firmware Upgrading