

Two-Note Non-Electric Door Chime - with Viewer

- The Non-Electric Chime mounts directly through the door and will accommodate door thicknesses of 3/4" to 2".
- The chime is equipped with a viewer.

LOCATING THE DOOR CHIME

1. The chime should be mounted in the center of the door - approximately 4½ feet to 5 feet above the floor. **NOTE:** Be sure there are no obstructions on the inside of the door to interfere with the chime's baseplate.
2. **Refer to Figure 1.** Mark the location of the mounting holes parallel to the edge of the door. **NOTE:** It is important that the holes are parallel to the edge of the door for proper operation of the chime.

PUSHBUTTON ASSEMBLY

NOTE: If the pushbutton assembly is located in a position that is exposed to the rain, it is recommended that a bead of caulking material is placed around the 1" holes before the pushbutton assembly is installed.

NAME CARD HOLDER

1. **Refer to Figure 2.** Print or type name and address on card (supplied). Place the card in holder with printing toward the front and secure in place with metal trim.
2. Remove metal trim, name card holder, and name card from the pushbutton housing to reveal mounting holes.
3. Locate viewer and pushbutton shaft into predrilled holes until the mechanism is flush against the door and in place with mounting screws provided.
4. **Refer to Figure 3.** Secure metal trim in place by tightening the screw located at the bottom of the unit.

MOUNTING THE BASEPLATE

1. **Refer to Figure 4.** Position the baseplate mechanism over the pushbutton shaft and viewer. Align baseplate parallel with the edge of the door and insert the top and bottom mounting screws provided. Tighten screws securely.

OPERATION

1. Check the door chime by pressing the pushbutton. The chime should sound two (2) notes.
2. If the door chime does not operate properly, check the baseplate mechanism and pushbutton assembly. Both assemblies must be parallel to the door for proper chime operation.
3. If necessary, re-position the assembly.

MOUNTING THE CHIME COVER

Refer to Figures 4 and 5.

1. Break off the surplus pushbutton shaft to insure proper clearance when the cover is in place.
2. Place the tab located on top of the baseplate into the slot located in the top of the cover.
3. Position the cover over the tab and push cover flush with the door.

