

### READ AND SAVE THESE INSTRUCTIONS

The illustrations in this document are generic; your control appearance may be slightly different from the ones shown.

#### ⚠ WARNING

**Wear safety glasses and gloves while performing these instructions (steps 1 to 5).**


This auxiliary control must be paired with the Advanced Touchscreen Control.

### INSTALLATION

- 1 Unplug the ventilation unit.


NOTE: If the control is to be installed in an electric box, go to step 5.

- 2 Cut a 2<sup>7</sup>/<sub>8</sub>" x 1<sup>3</sup>/<sub>4</sub>" hole in a wall, at a convenient location for the control. See figure at right.

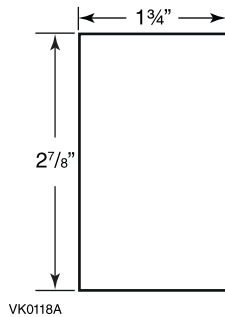


VK0118A

- 3 Temporarily place the control over the hole and mark both mounting screw hole positions.

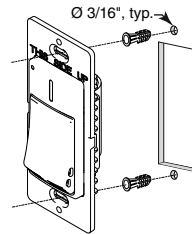

VC0206A

- 4 Remove the control, drill both screw holes (3/16" Ø) in wall and insert the wall anchors (included).

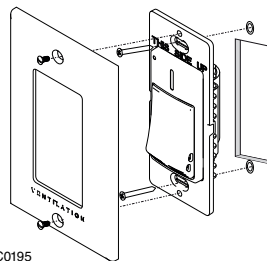

VC0195


- 5 Mount the control to the wall.

- 6 Plug the ventilation unit.

- 7 Disengage the control from its support by lifting and tilting the bottom part of the control.


NOTE: This wall control requires 2 AAA 1.5 V batteries (included).

- 8 Install the batteries at the back of the control.

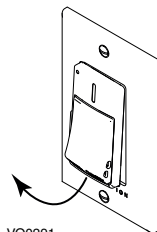

VO0291

- 9 Keep the auxiliary control in hand. Go to the main control. Reach the Wireless Connection screen (see figure at right) following this path: HOME PAGE (press on the gear at the bottom right)\SETTINGS\INSTALLATION\WIRELESS CONNECTION. Press on the auxiliary control button for 5 seconds. The LED indicator will fade in and out to indicate the system is trying to pair the auxiliary control with the main control. The main control will detect the item. This procedure will take 30 s max.

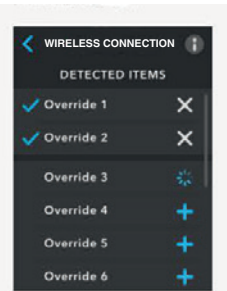


VC0207A

Press on + to complete pairing. Once the pairing is done, the item will move in the upper part of the screen and a ✓ will appear at the left of the item.


NOTE: It is possible to unpair an item by pressing on x.

- 10 If needed, reach the Automatic Auxiliary Control screen (see figure at right) following this path: HOME PAGE (press on the gear at the bottom right)\PREFERENCES\AUTOMATIC AUXILIARY CONTROL to modify the humidity detection feature.

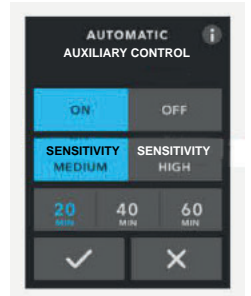

VC0208A

- 11 Install the auxiliary control back in its support. Insert the top brackets in the notches. Push on the bottom part of the control until it clicks in place.

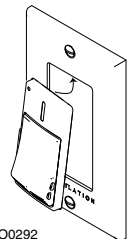

VO0292

- 12 Test the wall control.

### HOW TO USE THE CONTROL



VC0188

The button works following this sequence:

- Click 1 = 20 min
- Click 2 = 40 min
- Click 3 = 60 min
- Click 4 = OFF
- and so on

The indicator lights up as per the selected duration and the system exchanges air at MAX speed.

If the humidity sensor detects a humidity rise, the exhaust fan will activate in MAX speed for a 20-minute, a 40-minute or a 60-minute period as per the Automatic Auxiliary Control setting.

### HOW TO CHANGE THE BATTERIES

If a batteries change is required, the low batteries indicator will flash for 5 seconds when pressing on the button.

Perform step 7 to access the batteries.

Remove the old batteries. Dispose of used batteries as per local rules and regulations.

Replace the batteries. The use of rechargeable batteries is not recommended.

Perform step 11 to install the auxiliary control back in its support.

### TROUBLESHOOTING

| PROBLEM   | CAUSE  |
|---|--|
| No detected item on Wireless Connection screen              | The batteries are not installed  |
|   | Low batteries  |
| LED indicator does not light up when pressing on the button | The batteries are not installed  |
|   | Low batteries  |
|   | Range too high between the auxiliary control and the main control                      |
| Humidity sensor does not work                               | Low batteries  |
|   | Sensitivity too low, set sensitivity to High in the Automatic Auxiliary Control screen |