

# Bar Stool & Table Assembly Instructions

201107

Max Weight Capacity 330 Lb

 
READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,  
DO NOT USE THIS PRODUCT!


DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR  
FUTURE REFERENCE.

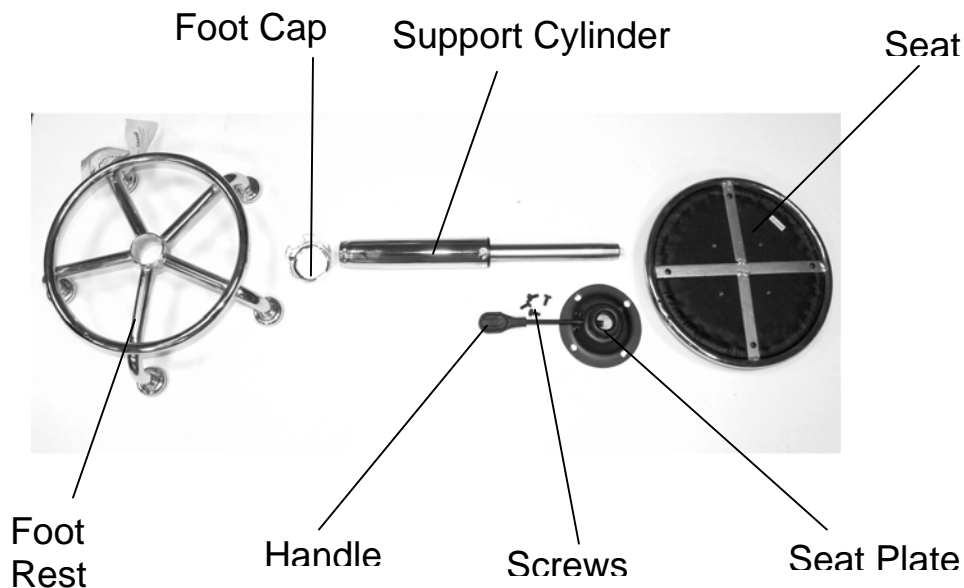


## ASSEMBLY INSTRUCTION

 For proper assembly, follow the instructions below.

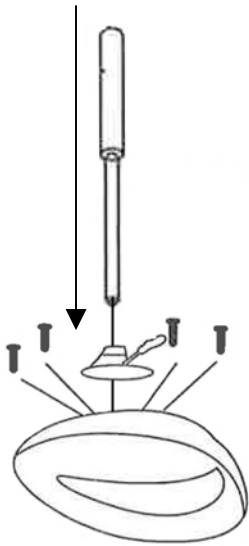

 Use an allen wrench to attach the Seat Plate to the underside of the Seat with the provided Screws. Insert the Support Cylinder into the center of the Seat Plate

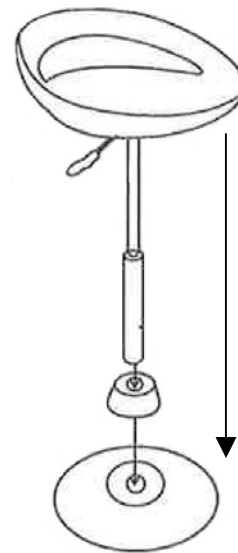

Place the Foot Cap over the Footrest.

Insert the Support Cylinder into the center hole of the Footrest, and press down **FIRMLY**.

To raise and lower the Seat, grasp the Handle and pull upward without applying any weight on the Seat. To lower, raise the Handle upward by sitting on the Seat.



To disassemble, turn the stool upside down, and hit the clip on the center of the bottom of the Footrest with a hammer or mallet to disengage the locking mechanism. Then, turn the stool right side up, and lift the Seat upward, pulling the Seat Assembly off of the Footrest.

To separate the Support Cylinder from the Seat, gently strike the Seat Plate with a rubber mallet until the Seat and Support Cylinder have separated.