

# INSTRUCTIONS

1. Turn **OFF** water supply to tub faucet.
2. Remove all Handles (C) by using a small Slotted Screwdriver to carefully pry Index Button (A) from end of Handle (C). Remove Handle Screw (B) and Handle (C).
3. Remove old Flange (D) and Nipple (E) by unthreading.
4. Remove all Stem Assemblies (F) using Stem Removal Tool (supplied). **NOTE:** Compare old Stems to new Stems. In some cases, the old Stems may not match the new Stems. If the Stems do not match, alternate Stems may be available for purchase. If Stems match, proceed to next step.
5. Use Seat Wrench to remove all Seats (H). **NOTE:** Compare old Seats to new Seats. In some cases, the old Seats may not match the new Seats. If they do not match, alternate Seats may be available for purchase. If Seats match, proceed to next step.
6. Use Seat Wrench to install new Seats (H). **Do Not Overtighten**
7. Install new Stem Assemblies (F) using Stem Removal Tool (supplied). **Do Not Overtighten.**
8. Turn **ON** water supply to tub faucet. **CHECK FOR LEAKS.** If water leaks through Packing Nut (G), adjust as necessary. **Do Not Overtighten.**
9. Screw new Flange Nipple (E) into each Stem Assembly (F) and thread new Flange (D) onto each Flange Nipple (E)
10. Replace Handle (C) onto each Stem Assembly (F). Secure with Handle Screw (B) and insert new Index Button (A).
11. Old parts may be discarded after new parts are installed.

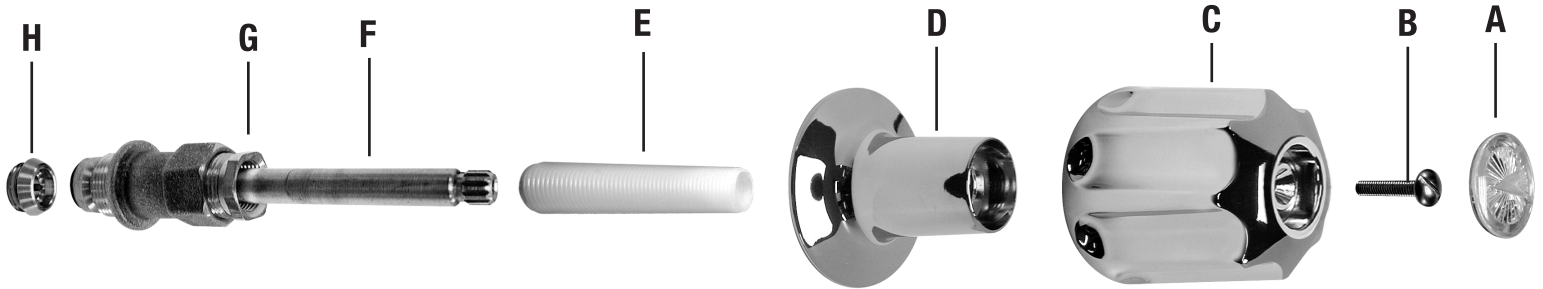


ILLUSTRATION MAY OR MAY NOT REPRESENT ACTUAL PARTS.