

INSTRUCTIONS

Tools Required: Screwdriver

- 1. Turn off water supply to faucet.
- 2. Pry off handle cap (A) with a screwdriver.
- 3. Remove handle screw (B) at top of handle. Remove handle (C) by pulling straight out.
- 4. Remove old flange (E) by un-threading nut (D).
- 5. Install new flange by threading onto nipple (F) and replacing nut (D).
- 6. Replace handle (C) and tighten with handle screw (B).
- 7. Replace handle cap (A) and turn on water supply to faucet.

Shop for quality Danco products on our website.

Learn more about home bath and faucets we have.