

Eureka!

JetLink™ Hose

Instructions for Use

- Do not attempt to use stoves or accessories that are not certified as JetLink™- compatible by Eureka! or Jetboil.
- Male end of JetLink™ Hose connects to JetLink Output of stove connected to the Fuel Source. Female end of JetLink™ Hose connects to Fuel Input of 2nd stove.
- Insure that all threaded connections are completely secure/threaded before operating system.
- Operate stove on a horizontal surface, at least 1m/3.3ft away from any combustible materials.
- If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water. Put some soapy water on the gas connection points, if a bubble is found, there is gas leakage.
- Check that seals are in place and in good condition before connecting to gas flow.
- Always disconnect from fuel source after use. Store fuel canisters outdoors in a dry, well-ventilated area, away from heat, and out of reach of children.

v 2.0