

GAP BETWEEN ALARM AND MAGNETIC SENSOR

(Alarm is activated when switched ON and gap between alarm and magnetic sensor is greater than 0.5")

BATTERY TEST AND INSTALLATION

The Magnetic Window Alarm requires (4) LR44 button batteries (included). Average battery life for typical usage is 1 year.

1. Slide cover off the battery compartment located on the front of the main unit.

- 2. Push the 'Battery Test' pushbutton in the battery compartment. If the green light illuminates, the battery is still good. If it fails to illuminate, replace all batteries.
- 3. Insert (4) LR44 button batteries noting polarity.
- 4. Replace battery compartment cover.

IMPORTANT: Remove batteries before storing the Alarm for extended periods. Batteries corrode over time and may cause permanent damage to the unit. Different types of batteries or new and used batteries should not be mixed. Depleted batteries should be removed from the unit and disposed of properly.

INSTALLATION

Using the double sided adhesive tape provided, mount the alarm and magnetic sensor on window, door, or cabinet to be protected, placing one of the units on the part of the fixture that opens (window) and the other unit on the stationary part of the fixture (frame). Mount so that when the window, door or cabinet is closed, the gap between the alarm and sensor is no more than 0.5" (preferably less).

OPERATION

- 1. To arm the unit, slide cover off the battery compartment located on the front of the main unit. Toggle ON/OFF switch to the ON position. The window on the housing will become red. Replace battery compartment cover. Whenever the protected window, door or cabinet is opened (causing the alarm to be separated from the magnetic sensor by more than 0.5"), the alarm siren will sound continuously until disarmed.
- 2. To disarm the unit, slide cover off the battery compartment. Toggle ON/OFF switch to OFF Position. Make sure the window, door or cabinet is closed before rearming.

NOTE: To test, a cloth can be used to cover the alarm to reduce risk of hearing damage.

CARE AND MAINTENANCE

To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry. Do not use chemical agents as this may damage and discolor the unit.

WARNING

Limitations of Alarm Products

This product should be tested weekly to make sure it is working properly. The product, if used properly, may reduce the risk of burglary, robbery, fire, or other adverse events. However, JASCO is not an insurer, this product is neither insurance nor a guarantee that such an event will be prevented, and users should protect themselves with proper insurance. JASCO makes no representation that this product cannot be compromised or circumvented, that it will provide an adequate warning, or that it will prevent any personal injuries, property damage, or other losses. Like any alarm product, including expensive commercial systems, it may be bypassed, it is subject to compromise, and it may fail to warn for a variety of reasons, including, but not limited to: improper installation or positioning; improper maintenance; tampering; dead or improperly installed batteries; sensing limitations; component failures; smoke may not reach detectors; for wireless systems, the functional range may be adversely affected by certain environmental conditions, radio frequency interference and obstructions between the transmitters and receivers; for systems using telephone lines, the lines may be out of service or disrupted; for infrared products, intrusions may be outside of a product's designed range and certain environmental conditions may impact

performance and audible alarm signals may be outside of hearing range, muted by doors, walls, and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.



For Indoor Use Only Do Not Use in Wet Locations



Risk of personal injury

 Prolonged exposure to alarm siren may cause permanent hearing loss



Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage
 Do not mix old and new or

- other battery types
 Replace all batteries at the
- same time
- Replace fully discharged batteries immediately

5