


Installation

1. Locate the convenient "anchor points" on your appliance fitting (see arrows on diagram above).
2. Hold screen over stove fitting. Hook round end of spring to back of screen over open side of anchor point
3. Holding circle end of installation pin, push pin through screen and center of spring.
4. Place notch on center bar of lower spring coil. Push hook toward anchor point.
5. Push spring hook past anchor point. Turn and release slowly to hook spring in back.

Keep installation pin for future use

Note: Screen position can be adjusted using other anchor points

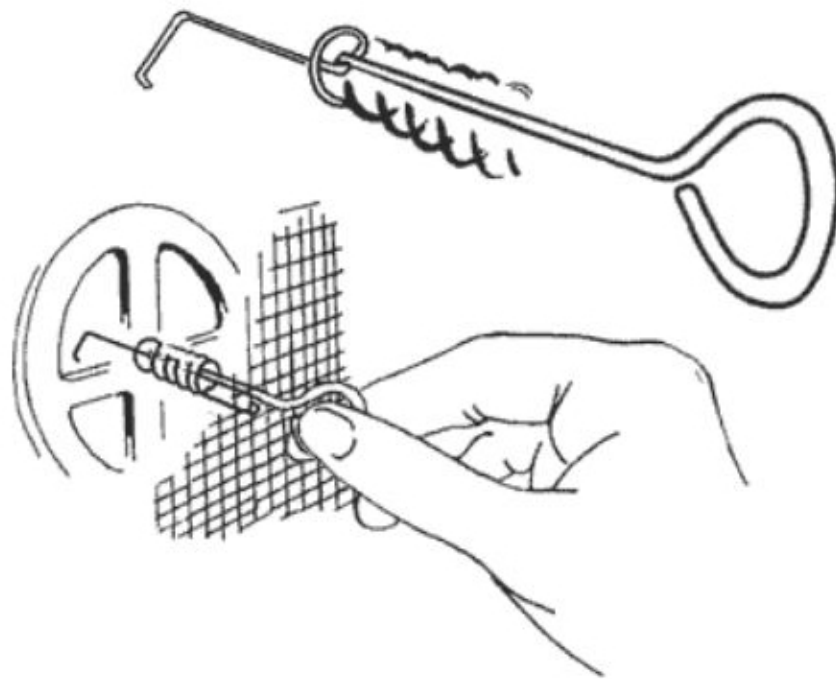

Rely only on high-grade RV appliances on our virtual shelves.