

Mount may be installed on any angle horizontal surface. However, in order to use it as a rotating mount, it must be installed in a completely level position. Shims, not provided, may be used during installation to level this mount.

Some fasteners required for installation.

