## **Which way does the switch on the back need to be positioned for outdoor use?** Jun 30, 2020

It should be positioned on the left-hand side for outdoors.

<u>View other home TV and audio</u> made <u>by Pyle on our website.</u>