## PHA40 USER MANUAL



### 4-Channel Stereo Headphone Amplifier, 1/4" Connectors

#### **IMPORTANT SAFETY INSTRUCTIONS**

- 1. **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- 2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
- Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to.
- 4. **Follow Instructions:** All operating and use instructions should be followed.
- 5. **Water and Moisture:** The appliance should not be used near water-for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool, or a wet basement.
- 6. **Ventilation:** The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings: or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 7. **Heat:** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 8. **Power Sources:** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 9. **Grounding or Polarization:** Precaution should be taken to insure that the grounding or polariza tion means of an appliance is not defeated.
- 10. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point at which they exit from the appliance.
- 11. **Cleaning:** The appliance should be cleaned only as recommended by the manufacturer.
- 12. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

#### 13. Non-use Periods:

The power cord of the appliance should be unplugged from the outlet when the appliance is to be left unused for a long period of time.



#### 14. Object and Liquid En


Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

- 15. Carts and Stands: If the appliance is used with a cart or stand, the cart or stand should be a type recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces cause the appliance and cart combination to overturn.
- 16. **Mounting:** The appliance should be mounted only as recommended by the manufacturer.
- 17. **Damage Requiring Service:** The appliance should be serviced by qualified service personnel when:
  - **A.** The power-supply cord or plug has been damaged.
  - **B.** Objects have fallen into, or liquid has been spilled into the appliance enclosure.
  - **C.** The appliance has been exposed to rain.
  - **D.** The appliance has been dropped, or the enclosure damaged.
  - **E.** The appliance does not appear to operate normally or exhibits a marked change in performance.
- 18. **Servicing:** The user should not attempt to service the appliance beyond that described in the user's operating instructions. All other servicing should be referred to qualified personnel.
- 19. **Overloading:** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 20. **Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 21. **Safety Check:** Upon completion of any service or repairs to this appliance, ask the service technician to perform safety checks to determine that the appliance is in proper operating condition.

#### FEATURES AND CONTROLS

#### Power On LED Indicator


The indicator lights when the power supply is connected to switch on.

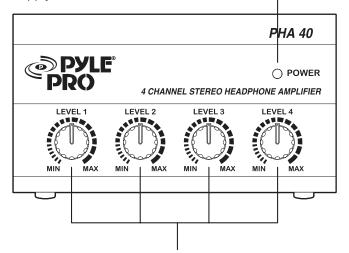

# Stereo Headphone Output Level Controls


Adjust the output signal level of each headphones output.

#### DC 12V/150mA Power Supply

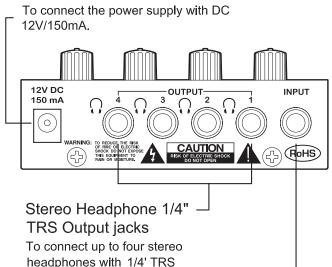

Stereo 1/4" TRS Source Input jack To connect the output of a stereo line level source with 1/4' TRS stereo plug.

#### **CONNECTION DIAGRAM**

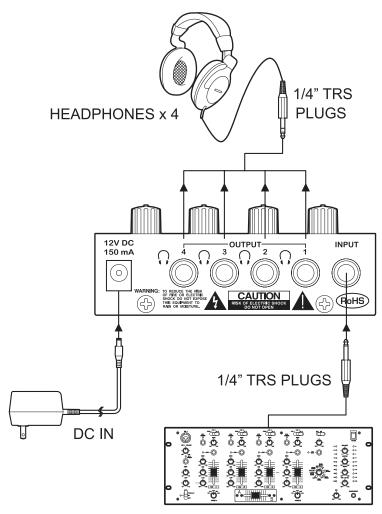

**PYLE PRO MIXER** 

#### **Features and Technical Specs:**

- Compact Control Unit
- Stereo Headphone Output Level Adjustment
- Independent Channel Rotary Volume Controls
- (4) 1/4" Stereo Headphone TRS Output Connector Jacks
- 1/4" TRS Source Input Connector Jack
- Power On LED Indicator
- Power Supply Included, DC 12V/150mA
- Dimensions (W x D x H): 4.07" x 1.18" x 2.24"



stereo plug.

This product can expose you to a chemical or group of checmicals, which may include "Nickel Carbonate" which is known in the state of California to cause cancer, birth defects, or other reproductive harm.