

Foreword _____

Thank you for purchasing this fine PYLE amplifier.

Please read this operating instruction carefully before using. It will acquaint you fully with all its features and help you enjoy your time .

The product adopts the most advanced digital technique in the world. It is 4 channels with high power output, so to speak, the real acoustic centre of your family movie theatre.

Features _____

- ◆ Stereo Amplifier With A/B Speaker Output
- ◆ AM/FM Radio With Digital Display Screen
- ◆ Auto Scan, Memory, Radio Station PREVIOUS/NEXT control
- ◆ Remote Control Included
- ◆ 50 Radio Station Pre-Set Memory
- ◆ Volume/Balance/TREBLE/BASS Gain Control For Main Channel
- ◆ VOLUME/BASS/TREBLE/ECHO Control For Microphone
- ◆ Two Microphone Input Jacks
- ◆ Three RCA Input Source
- ◆ 110/220V power switch
- ◆ AM/FM Antenna Included

 
Precautions _____

1. Power source-The unit should be connected to a power supply AC-110V/60Hz or AC-220V/50Hz.
2. Ventilation-The unit should be situated so that its location or position does not interfere with its proper ventilation. Place the unit at least 10cm away from the walls.
3. Water and moisture-The unit should not be used near water-for example, near a swimming pool in a wet basement, etc.
4. Electric shock-if a metal object, such as hair pin or needle comes into contact inside this unit, a dangerous electric shock may result. For families with children, never permit children to put anything, especially metal, inside this unit.
5. Enclosure removal-Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.
6. Abnormal smell-if an abnormal smell or smoke is detected, immediately turn the power OFF and pull out the power cord. Contact your dealer or nearest service station.

Technical Specifications


Technical		PT260A
Main Channel Power Output PMPO, 4 Ohms, 1KHz test THD(1KHz)		100Wx2 <1%
Normal Load Impedance		8 Ohm
Input Sensitivity Impedance	CD/DVD AUX	300mV/33k Ohm
	Microphone	6mV/600 Ohm
Signal to Noise Ratio	Pure Amplifier	>76dB
	KARAOKE	>71dB
Frequency Range Frequency Response(40Hz-15KHz)		±2dB
Tone Characteristic(100Hz-10KHz)		±14dB
Power Requirements		AC-110V/60Hz AC-220V/50Hz
Dimension		19" (W) x11.4" (D)x4.7" (H) inch
Weight		9.9 lbs

※ Specifications subject to change without prior notice

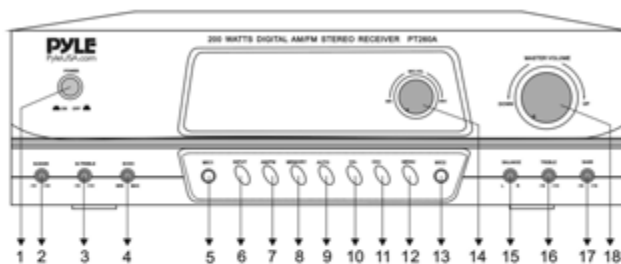


- | | |
|--|---|
| <p>1. POWER SWITCH
Press to switch the power unit ON or OFF.</p> <p>2. MIC BASS
Adjusts the bass of MIC.</p> <p>3. MIC TREBLE
Adjusts the treble of MIC.</p> <p>4. ECHO CONTROL
Turn the knob to adjust the MIC echo level.</p> <p>5. MIC INPUT JACK 1
KARAOKE MIC connect to this jack.</p> <p>6. INPUT
This is used to select the input sources: DVD/CD, TUNER, IPOD/MP3, AUX</p> <p>7. AM/FM SELECTOR</p> <p>8. MEMORY</p> <p>9. AUTO
Automatically search the signal of tuner.</p> <p>10. CH-
This knob is used to select the preview station which has been kept in system.</p> <p>11. CH+
This knob is used to select the next station which has been kept in system.</p> | <p>12. MENU CONTROL
This is used to increment and decrement level for the selected function of STEREO/MONO. Sharp tuning when in TUNER status and VFD style by adjusting master volume knob.</p> <p>13. MIC INPUT JACK 2
KARAOKE MIC connect to this jack.</p> <p>14. MIC VOLUME
Adjusts the volume level. Turn the knob clockwise to increase the MIC volume.</p> <p>15. BALANCE CONTROL
Turn the knob to adjust the master balance level.</p> <p>16. TREBLE CONTROL
Turn the knob to adjust the master treble level.</p> <p>17. BASS CONTROL
Turn the knob to adjust the master bass level.</p> <p>18. MASTER VOLUME CONTROL
Adjusts the volume level. Turn the knob clockwise to increase the volume.</p> |
|--|---|

 PT260A Rear panel

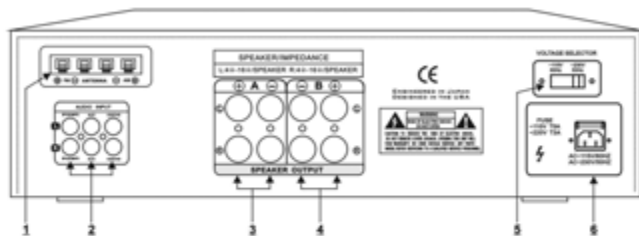

- (1) **TUNER ANT**
Connect for AM and FM antennas.
- (2) **AUDIO INPUT JACKS**
Connect the audio output jacks of IPOD/IMP3 \ AUX \ CD/DVD to these jacks.
- (3) **A SPEAKER OUTPUT TERMINALS**
Connect your speaker system to these terminals.
- (4) **B SPEAKER OUTPUT TERMINALS**
Connect your the other speaker system(s) to these terminals.
- (5) **110V/220V SWITCH**
According to power voltage ,push this button to the station of the 110V or 220V.
- (6) **POWER CORD**
Connect to AC 110V/60Hz&220V/50Hz outlet.

 PT260A Remote

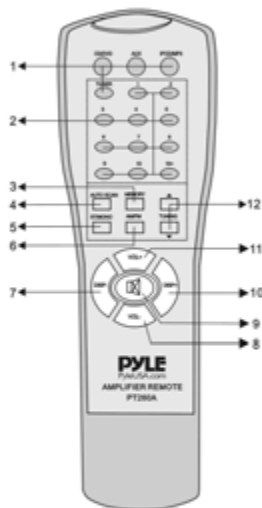


1. **Signal input selector**
CD/DVD,AUX,IPOD/IMP3,TUNER selector
2. **Number buttons**
Using for st SELECT & STORE
3. **MEMORY**
After a station has been found, you can store the station by pressing the MEMORY button.
4. **AUTO SCAN**
AM/FM auto scan selector, scan and store stations automatically. Can store 50 stations.
5. **ST/MONO**
Stereo and mono selector.
6. **AM/FM**
AM/FM selector.
- 7/10. **DISP- / DISP+**
Display Down And Up
- 8/11. **VOL- / VOL+**
Master Volume Down And Up
9. **MUTE**
Mute Selector
12. **TUNING▲ TUNING▼**
The two keys are used to adjust to the best signal of the stations.

Remote Control Operation

1. Remote control should be operated within 6 meters and the scope of 30° in front of receiver.
2. Make sure that there is no big obstacle between remote control and machine.
3. Remote sensor should be far away from the light, high amounts of light can affect its performance.

 Connecting to amplifier

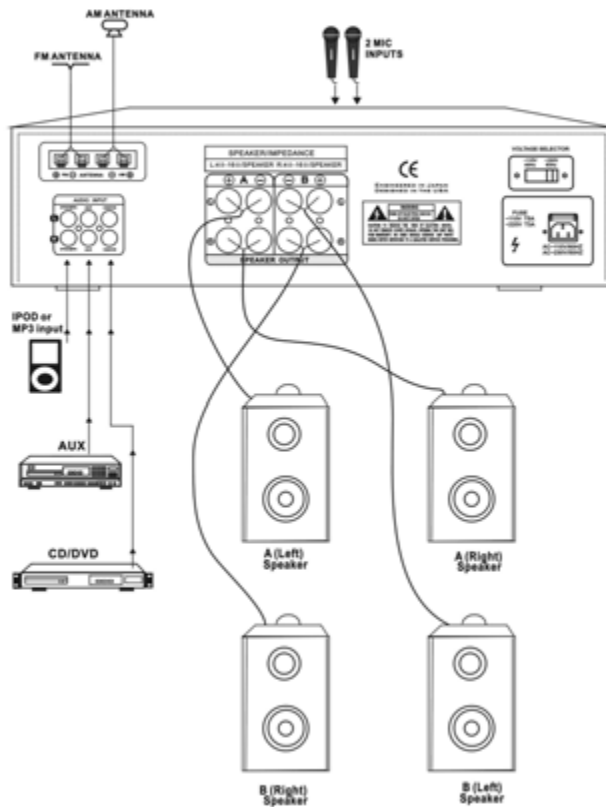

SAFETY INSTRUCTIONS

1. Make sure that all connections are properly connected and the main volume is set to minimum level before turning on the unit.
2. When more than one pair of speakers are used, (specially the main speaker output) make sure that the speakers used are of the same wattage and impedance, otherwise the unit maybe damaged under high power or long term operation.
3. To avoid humming sounds and unwanted noise, make sure that all the wires are properly inserted.
4. For speaker cords, strip off the vinyl coating and twist the wire tip. Push down the pink jack or loosen the screw terminal, before inserting the wire tip, then fasten it and tighten the screw. Be careful not to let the wires stick out of the terminal otherwise this may cause a short circuit when wires of different terminal contact each other.
5. After the unit is turned on, adjust the main volume to the desired level same is true with the bass and treble volume, etc.