


Starfrit

THE ROCK[®]



8-PERSON REVERSIBLE PARTY GRILL

P.3

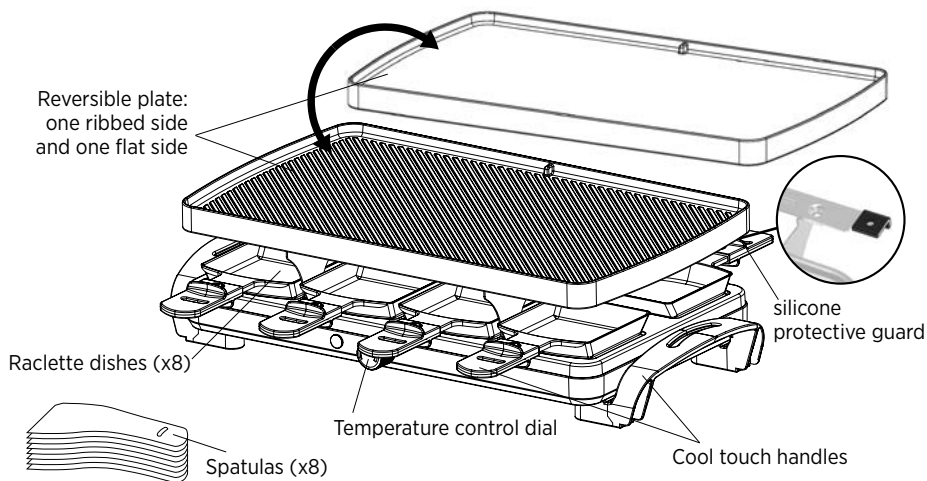

OPERATING AND SAFETY INSTRUCTIONS

Item no.	Voltage (V)	Wattage (W)	Frequency (Hz)
024403	120	1500	60

IMPORTANT SAFEGUARDS (Read the instructions before use)

WARNING: To reduce the risk of fire, electrical shock, serious personal injury and/or property damage:

- A. Do not touch hot surfaces. Always use the handles while it is in use. Use protective oven mitts or gloves to avoid burns or serious personal injury.
- B. To protect against electric shock, do not immerse the power cord, plug or product in water or expose to other liquids.
- C. Do not use appliance unless handles are securely attached.
- D. Keep the product out of the reach of children and pets. This product is not intended for use by children. Close adult supervision is necessary when any appliance is used near children.
- E. Unplug appliance from electrical outlet before cleaning and when not in use. Allow to cool down completely before removing the plate or flipping the plate on the other side.
- F. Do not operate the product if it has a damaged power cord or plug, or after the appliance malfunctions or has been damaged in any manner. Do not attempt to examine or repair this product yourself. Please call the customer service number provided in this user manual.

- G. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.
- H. Always allow the appliance to cool down completely before putting on or taking off parts. Never flip the plate over while it is still hot.
- I. When placing the raclette dishes, handles should always be facing out away from the heating element.
- J. Always use the provided spatulas to remove food from the raclette dishes. Always place hot raclette dishes on a heat resistant surface.
- K. Never heat the appliance without the plate as it can cause serious injuries.
- L. Only use the accessories/parts supplied with this appliance.
- M. Use extreme caution when moving an appliance containing hot oil or any other hot liquids.
- N. To disconnect, lower temperature completely then remove the plug from the outlet, pull directly on the plug – do not pull on the power cord.
- O. Do not plug or unplug the product into/from the electrical outlet with a wet hand.
- P. Take proper precautions to prevent burns, fire, or personal or property damage as this appliance generates heat and steam during use.
- Q. Use the product in a well-ventilated area.
- R. Keep the product away from curtains, wall coverings, clothing, dish towels, or other flammable materials.
- S. Do not use attachments not recommended or sold by the product manufacturer
- T. This product is intended for indoor, non-commercial use in cooking or heating food items for human consumption. Do not use outdoors or for any other purpose.
- U. Do not allow the power cord to hang (e.g., over the edge of a table or counter) or touch hot surfaces.
- V. Do not place the product on or near a hot gas or electric burner, or in heated oven or microwave oven.
- W. Always place the product on a flat, level, stable surface – it is not recommended to use the appliance on temperature sensitive surfaces.
- X. Connect the power plug to an easily accessible outlet so that the appliance can be unplugged immediately in the event of an emergency.
- Y. Do not use the appliance with a programmer or timing device that switches it on automatically. The use of such devices is dangerous and can cause a fire risk.
- Z. Do not use the appliance for anything other than its intended use.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

GROUNDING PLUG: As a safety feature, this appliance is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

SPECIAL INSTRUCTIONS: A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.

AN EXTENSION CORD MAY BE USED IF CARE IS EXERCISED IN THEIR USE:

- Minimize the risk of overheating by using the shortest UL or ETL listed cord possible.
- The marked electrical rating must be at least as great as that of the product.
- Never use a single extension cord to operate more than one appliance.
- If the product is of the grounding type, the extension cord must be a grounding-type 3-wire cord.
- Arrange the longer cord so that it will not drape over a countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

DO NOT alter the plug. DO NOT attempt to defeat the safety purpose of the grounded plug.

BEFORE FIRST USE:

- Thoroughly clean both sides of the plate, raclette dishes and spatulas in hot, soapy water or place in the dishwasher. Dry thoroughly.
- Do not immerse the base or heating coil in water or any other liquid. If needed, wipe the base with a damp cloth and dry thoroughly.
- Install the plate onto the base by aligning with side supports. **Ensure silicone protective guards are securely installed to prevent plate from scratching.**
- Place raclette dishes onto tray surface, with the handles facing out.

CARE AND MAINTENANCE:

WARNING: Ensure the appliance is unplugged from the electrical outlet and allow it to completely cool down before handling or cleaning

CLEANING:

1. Remove the plate and raclette dishes from the appliance.
 - WARNING:** Ensure the appliance is completely cooled before cleaning. Use protective oven mitts to remove the plate.
 - NOTE:** Do not remove the silicone protective guards on the plate support.

2. Thoroughly wash both sides of the plate, raclette dishes and spatulas in hot, soapy water or place in the dishwasher.
CAUTION: Do not pour cold water on the product, as the sudden temperature change may damage the product or create a burn hazard
NOTE: Do not use bleach or abrasive cleansers/scouring pads to clean the plate, as it may damage the non-stick finish.
3. Rinse with hot water and thoroughly dry.
4. Wipe the base with a soft, damp cloth and dry thoroughly.
NOTE: Do not immerse the base, heating element or power cord in water or any other liquids. Do not place in the dishwasher.

TO USE

(Read the instructions before use)

WARNING: Do not touch hot surfaces. Always use the handles of the product. Use protective oven mitts or gloves to avoid burns or serious personal injury.

NOTE: Never use metal utensils such as forks, knives, mashers, beaters, or food choppers with this product, as they will scratch the non-stick surface. Only use plastic, rubber, wooden, or silicone cooking utensils.

- A. Place the product on a flat, stable, heat-resistant surface.
- B. Make sure the plate is securely installed before using. When ready to use, lightly-coat the entire cooking surface and raclette dishes with cooking oil or shortening then wipe off any excess with a paper towel. Repeat as necessary for a longer lasting non-stick surface.
NOTE: Ensure silicone protective guards are securely installed to prevent plate from scratching.
- C. Plug the power cord into a standard 120-volt AC electrical outlet.
- D. Set the thermostat to the desired temperature. The LED indicator will illuminate, indicating the product is heating.
- E. When the LED indicator turns off, the product has reached the selected temperature.
NOTE: Do not cook foods at a higher temperature than necessary, as cooking at high temperatures may cause discoloration or shorten the life of the non-stick surface.
NOTE: Due to the initial heating of the materials used in the manufacturing of the product, some light smoke/vapors may be released when used initially. This is normal.
- F. Use the ribbed or flat side to cook small strips of meat/chicken and vegetables. Use the raclette dishes to melt cheese.
NOTE: Always use the provided spatulas to remove food from the raclette dishes. Never leave raclette dishes in the appliance while empty.
- G. Once cooking is complete, lower temperature completely then unplug the power cord from the electrical outlet. Allow the appliance to cool down completely

WARNING: Always unplug the product when not in use or when it will be left unattended

CAUTION: Use extreme caution when moving/handling the product when it is hot.

MAINTENANCE

- Before each use, ensure the handles are securely attached and retighten as necessary.
- Store the product in a cool, dry place.
- For better non-stick performance, it is recommended to add a teaspoon of cooking oil prior to each use.
- Never heat an empty plate. Be sure there is oil, butter, liquid or food before using the appliance.
- Never cut anything on the plate or use utensils with sharp edges as to avoid piercing the non-stick surface.
- Never use metal scouring pads to clean the non-stick surface.
- Never pour cold water on the plate while it is hot. Sudden changes of temperature may cause metal to warp, resulting in an uneven bottom. Let the plate cool down on its own or place in lukewarm soapy water.
- The exterior may become dull and discolored due to the action of certain detergents. Our warranty does not cover this type of wear, as the performance of the plate is not affected.