


Starfrit

THE ROCK®



ELECTRIC FONDUE SET

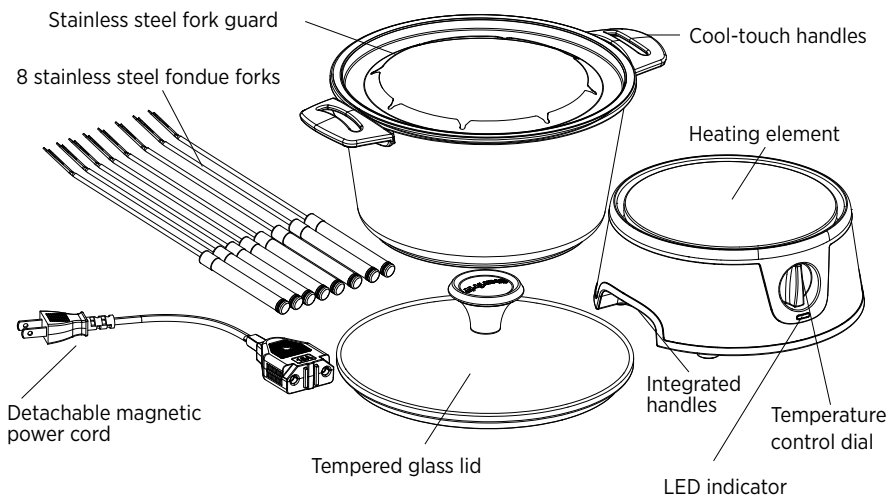

OPERATING AND SAFETY INSTRUCTIONS

Item no.	Voltage (V)	Wattage (W)	Frequency (Hz)
024704	120	1500	60

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

WARNING: To reduce the risk of fire, electrical shock, serious personal injury and/or property damage:

- A. Do not touch hot surfaces. Always use the handles while it is in use. Use protective oven mitts or gloves to avoid burns or serious personal injury. Use handles or knobs.
- B. To protect against electric shock, do not immerse the base, power cord, plug or product (other than stainless steel pot) in water or expose to other liquids.
- C. Do not use appliance unless handles and knob are securely attached.
- D. Keep the product out of the reach of children and pets. This product is not intended for use by children. Close adult supervision is necessary when any appliance is used near children.
- E. Unplug appliance from electrical outlet before cleaning and when not in use. Allow to cool down completely before assembling, disassembling, relocating, or cleaning the appliance.

- F. Do not operate the product if it has a damaged power cord or plug, or after the appliance malfunctions or has been damaged in any manner. Do not attempt to examine or repair this product yourself. Please call the customer service number provided in this user manual.
- G. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.
- H. Use extreme caution when moving an appliance containing hot oil or any other hot liquids.
- I. Always attach the magnetic plug to the appliance first, then plug cord into the wall outlet. To disconnect, switch control to OFF, remove plug from the outlet, then remove magnetic plug from the appliance. Pull directly on the plug – do not pull on the power cord.
- J. Take proper precautions to prevent burns, fire, or personal or property damage as this appliance generates heat and steam during use.
- K. Do not plug or unplug the product into/from the electrical outlet with a wet hand.
- L. Use the product in a well-ventilated area.
- M. Keep the product away from curtains, wall coverings, clothing, dishtowels, or other flammable materials.
- N. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- O. This product is intended for indoor, non-commercial use in cooking or heating food items for human consumption. Do not use outdoors or for any other purpose.
- P. Do not allow the power cord to hang (e.g., over the edge of a table or counter) or touch hot surfaces
- Q. Only the pot and lid can be used on a stovetop. All other pieces cannot be placed on or near a hot or electric burner. Do not place any pieces on or near a heated oven or microwave oven.**
- R. Always place the product on a flat, level, stable surface – it is not recommended to use the appliance on temperature sensitive surfaces
- S. Use the provided plug only.
- T. Connect the power plug to an easily accessible outlet so that the base can be unplugged immediately in the event of an emergency.
- U. Do not use the appliance with a programmer or timing device that switches it on automatically. The use of such devices is dangerous and can cause a fire risk.
- V. Do not use appliance for anything other than its intended use.
- W. Do not use metal utensils other than the fondue forks provided, as they will scratch the surface of the stainless steel pot.
- X. A fondue containing hot oil should not be left unattended.
CAUTION: Overtightening can result in stripping of screws or nuts or cracking of handle or feet.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

POLARIZED PLUG: This appliance is equipped with a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm, not use that outlet.

NOTE: This product features a special “quick release” magnetic detachable cord. For increased safety and injury prevention, the cord is designed to detach from the heating element when accidentally tripped over or pulled on.

SPECIAL INSTRUCTIONS: A short detachable power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.:

Longer detachable power-supply cords are available and may be used if care is exercised in their use.

IF A LONG DETACHABLE POWER-SUPPLY CORD IS USED:

- The marked electrical rating of the detachable power-supply cord should be at least as great as the electrical rating of the appliance;
- If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
- The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

BEFORE FIRST USE:

- Remove all packaging material. Ensure that no packaging material debris remains on the stainless steel or heating element.
- Before the initial use, clean the pot, forks and fondue ring in warm soapy water. Clean the heating element with a damp cloth – **DO NOT IMMERSE ELEMENT IN WATER.**
- Due to the initial heating of the materials used in the manufacturing of the product, some light smoke/vapors may be released when used initially. This is normal
- Do not place the product on or near a hot gas or electric burner, or in heated oven or microwave oven.

TO ASSEMBLE

FOR STORAGE



FOR USE



TO USE

WARNING: Do not touch hot surfaces. Always use the knob and handles of the product. Use protective oven mitts or gloves to avoid burns or serious personal injury.

NOTE: Never use metal utensils such as forks, knives, mashers, beaters with this product, as they will scratch the non-stick surface. Only use the forks provided or plastic, rubber, wooden, or silicone cooking utensils.

1. Place the product on a flat, stable, heat-resistant surface.
2. Rotate the temperature control counterclockwise to the MIN position before plugging the power cord into the wall outlet.
3. Fill the pot with broth, cheese, chocolate or other ingredients (depending on selected recipe).
CAUTION: To avoid any spillage or damage, never overfill the cooking pot.
Total capacity approx.: 12 cups; liquid (oil) approx.: 5 to 6 cups.
4. Place the pot onto the base.
5. Place the fork guide onto the pot and make sure it is correctly attached.
6. Connect the magnetic end of the detachable power cord into the connector on the base then connect the other end to a wall outlet. **CAUTION:** Do not connect the power cable to the wall outlet when the pot on the base is empty.
7. Turn the temperature control to desired temperature. The indicator light goes on to indicate that the heating has begun. The indicator light goes off when selected temperature is reached. **NOTICE:** During cooking, the indicator light cycles on and off to indicate that the temperature is being regulated.

8. When the required temperature has been reached, spear the ingredient with fork and gently dip in the fondue of your choice (broth, chocolate or cheese). If needed, rest the fork in the slot of the fork guide.
9. After serving, rotate the temperature control counterclockwise to the MIN position to turn off the appliance.
10. Unplug the power cord from the wall outlet, then from the appliance.
11. Allow the appliance to cool completely before cleaning and storing it.

WARNING: Always unplug the product when not in use or when it will be left unattended.

CAUTION: Use extreme caution when moving/handling the product when it is hot.

CLEANING AND MAINTENANCE

CLEANING

1. Ensure that the appliance is completely cooled before cleaning. Remove the temperature control dial from the socket before cleaning the product.
2. Drain excess broth, cheese or chocolate or wipe the interior surface of the base with a paper towel.
3. Thoroughly wipe the lid and base of the product with a hot, soapy cloth/sponge, ensuring that water or soap does not enter the socket.

CAUTION: After use, do not pour cold water onto the product, as the sudden temperature change may damage the product or create a burn hazard.

NOTE: Do not place the base or cord in a dishwasher.

NOTE: Do not use bleach or abrasive cleansers/scouring pads to clean the product, as they may damage the non-stick finish.

4. Rinse with hot water and thoroughly dry.
5. Ensure the socket and electrical pins are completely dry before storing or resuming use.
6. If cleaning the temperature control dial is necessary, wipe with a soft, damp cloth sponge and dry thoroughly. **NOTE:** Do not immerse in water or place temperature control dial in a dishwasher.

- Before each use, ensure the handles are securely attached.

- Store the product in a cool, dry place.

Any other servicing should be performed by an authorized service representative.

MAINTENANCE

- Before each use, ensure the knob is securely attached and retighten as necessary.

- Store the product in a cool, dry place.

- For better non-stick performance, it is recommended to add a teaspoon of cooking oil prior to each use.

- Never heat an empty utensil. Be sure there is oil, butter, liquid or food before placing the cookware on the range or burner.
- Cooking on excessive heat can cause warping of the cookware and permanent damage to the non-stick coating.
- Never cut anything in the cookware or use utensils with sharp edges as to avoid piercing the non-stick surface.
- Add salt to water only after it has come to a boil. Salt grain deposit on the cookware bottom will attack the metal as the heat melts it down.
- Never use metal scouring pads to clean the non-stick surface.
- Never put cold water into a hot utensil. Sudden changes of temperature may cause metal to warp, resulting in an uneven bottom. Let cookware cool down on its own or place in lukewarm soapy water.
- The exterior may become dull and discolored due to the action of certain detergents. Our warranty does not cover this type of wear, as the performance of the pan is not affected.