



Fry Cutter

INSTRUCTIONS

SUCTION BASE

Place unit on a flat surface. For added stability, bring lever back to engage suction base and ensure a firm non-slip grip. To release unit, push lever back to its original position.



REMOVE BLADE

To remove blade unit, press lock release and the blade will slide out. To reassemble, just slip it back in until blade unit snaps into place.



Blade and pusher plate



REMOVE PUSHER PLATE

To remove pusher plate, slide lock-arm clockwise and pusher plate is released. Slide lock-arm counterclockwise to secure pusher plate back into place.



WARNING
SHARP BLADES
Use care when operating
and washing this item
to avoid injury.



PRINTED IN CHINA FOR:
ATLANTIC PROMOTIONS INC.
LONGUEUIL (QUEBEC) J4G 1V6