


ELECTRIC LANDING GEAR SWITCH HARNESS

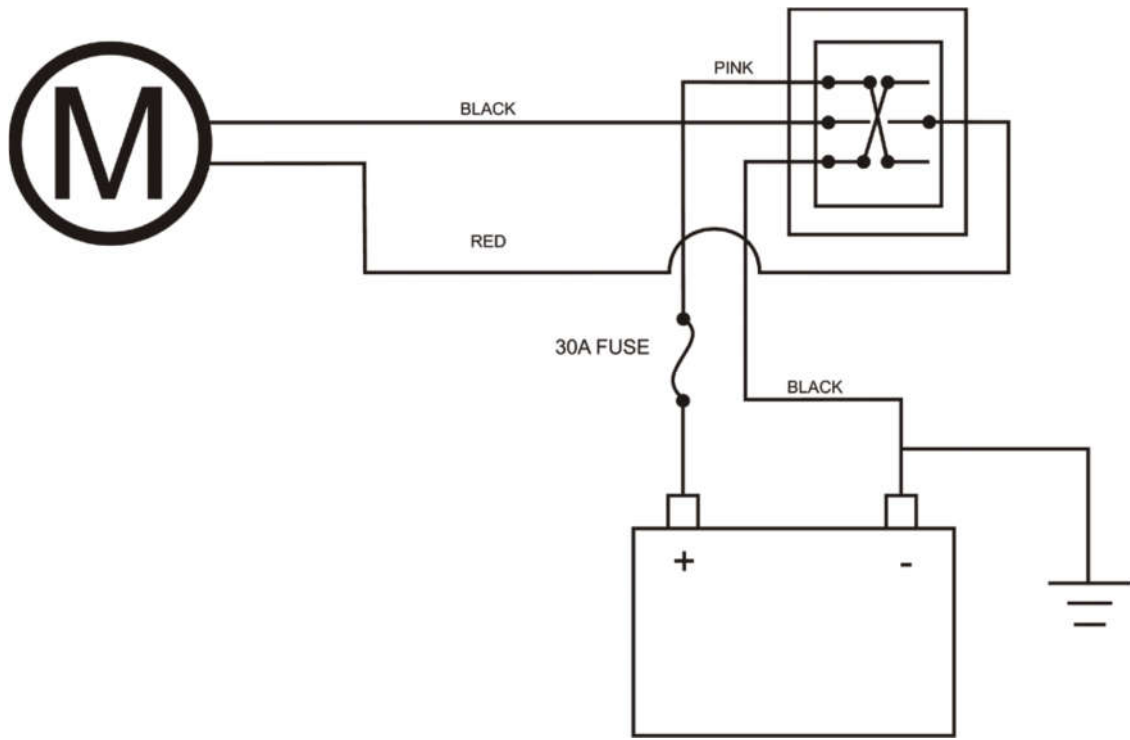

ELG SWITCH WIRING DIAGRAM

When working with Electric Landing Gear Switch Harnesses, the fuse holder (A) with fuse installed, must be included in the return.

DO NOT remove harness without the fuse holder attached as it will void the warranty and prevent receiving compensation for a warranty claim.

DO NOT remove fuse from ELG Switch Harnesses before installing units.



A