



RV BUG SCREEN A10-1330VP

PARE-INSECTES POUR VR



For RV Range Vents (Atwood®, Suburban and Magic Chef®)

- Note that the included spring connectors have a crossbar at one end of the coils. The other end of the coil is open. The open end is the end that attaches to the vent screen. The end with crossbar attaches to the heater vent (figure 1).
- Position vent screen over the range vent.
- Determine the best location to attach spring connectors to vent screen.
- Remove the vent screen and attach the open end of the spring connectors to the vent screen. The spring connector end should grasp three wires on the screen.
- Reposition the vent screen over the heater vent.
- Push the installation tool through the screen and into the center of the spring connector. The slot in the installation tool should grasp the spring connector crossbar.
- Stretch the spring connector and hook the spring connector onto the range vent (figure 2).
- Gently remove the installation tool from the screen.
- Repeat with the second spring connector.

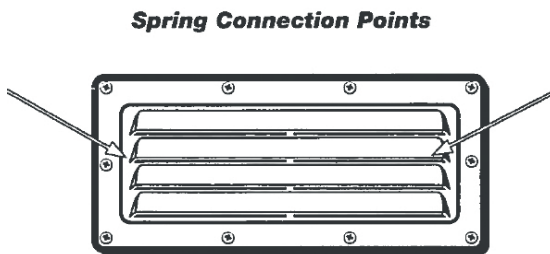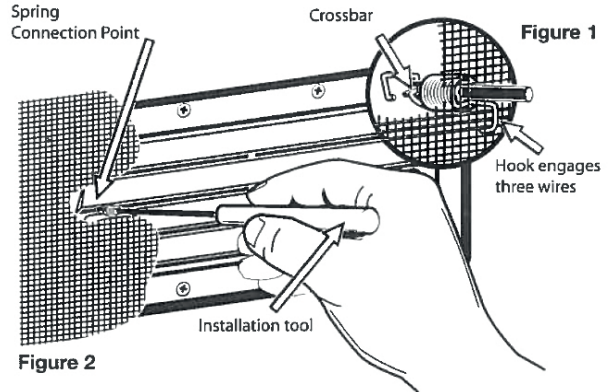

Cleaning the screens is necessary for proper air flow. Inspect screens frequently and clean as needed. Save the installation tool for reinstallation of screens after cleaning.