



## TempMinder® MRI-284KH – Instruction Manual

Thank you for the purchase of your new TempMinder® Fridge Thermometer with Probe. Please use the instructions below to setup this device.

### Initial Setup

1. Insert the included probe into the right side of the unit.
2. Remove the battery cover.



3. Move the battery (LR44) from the right slot to the left slot.
4. Use the included pin to toggle between C° or F°.
5. Place the monitor on the fridge/freezer using the rear magnet or use the rear bracket (optional).

### Display MAX/MIN Temperature

1. Press and release the **MAX/MIN** button to display the maximum temperature. Note the **MAX** on the display.
2. Press and release the **MAX/MIN** button again to display the minimum temperature. Note the **MIN** is display.
3. Press and release the **MAX/MIN** button to display the current. Note that neither **MAX** nor **MIN** are displayed.


### Clear MIN/MAX Temperature

Use the **MAX/MIN** button to display either the **MAX** or **MIN** temperature. Press and hold the **CLEAR** button for 2 seconds to clear either the **MAX** or **MIN** temperature reading.

### Freeze Alert

To enable Freeze Alert, press and hold the FREEZE ALT button for 5 seconds until you hear a beep and see the ❄️ symbol on the top right if the display. To disable, press and hold the FREEZE ALT button for 5 seconds until you hear a beep and the ❄️ symbol has disappeared from the display.

### Specifications

Freeze Alert	30.2°F ~ 39.2°F (-1° ~ 4°C)
	68°F ~ 77°F (20° ~ 25°C) & 40% ~ 70% RH
	Above 70% RH
	Below 40%RH
No Smiley Face (Blank)	Above 77°F (25°C) or Below 68°F (20°C) with 40% ~ 70%RH
Batteries	1 LR44 Battery
Indoor Temperature Range	14°F ~ 122°F (-10°C ~ 50°C)
Outdoor Temperature Range	-58°F ~ 158°F (-50°C ~ 70°C)
Indoor Humidity Range	20% ~ 90% RH
Battery Life	9 to 14 Months
Warranty	1 Year Limited Warranty