



## RV WINTERIZATION KIT STEP BY STEP GUIDE

PART NO. 90145



### **IMPORTANT:**

It is essential that you and any other operator of this product read and understand the contents of this guide before installing and using this product.

**SAVE THIS GUIDE FOR FUTURE REFERENCE**

**USER MANUAL**

## RV WINTERIZATION KIT

### Pressure Regulator Installation instructions:

---

1. Connect the quick connect coupler from winterization kit to the outlet side of the pressure regulator (see below fig.1)
2. Connect the quick connect stud fitting from winterization kit to inlet side of the pressure regulator (see below fig.1)



fig. 1



fig. 2

## RV WINTERIZATION KIT

### Using RV Winterization Kit w/VIAIR 400P/450P-RVS Air Compressor Instructions

---

1. Connect the primary air hose to your VIAIR compressor
2. Connect the tire inflation gun to the primary air hose
3. Connect the quick connect stud from the Winterization Kit to the quick connect coupler on the Tire Inflation Gun. (see fig. 2)
4. Connect the compressor to the battery – either the RV engine battery, battery connected to shore power, or any other vehicle.
5. Turn the compressor ON makes sure the engine is running.
6. Adjusting the pressure regulator: pull the trigger on the tire inflation gun, while holding on the trigger pull out the knob on the winterization kit regulator, turn the knob to adjust the pressure to no more than 30 psi, push the knob back in place when pressure reached 30 psi or less on the regulator's gauge, release the trigger.
7. Disconnect RV from outside water source
8. Turn off all RV power and shut off propane
9. Bypass your RV water heater
10. Open all faucets in the RV
11. Open the system drain valves in the RV letting the water empty
12. Flush the toilet in the RV to clear any water
13. Connect the blow out plug from the winterization kit to the city water inlet...not the fresh water tank
14. Connect the blow out plug to the female quick connect coupler on the regulator.
15. To start: press trigger and allow compressor to run until all water is blown out from all faucets and drain valves
16. To stop: release the trigger and disconnect the blow out plug from the water inlet. Turn the compressor off and disconnect the power cable from the battery.