


Superflex by Alpha Systems LLC Roofing Membrane Installation Instructions

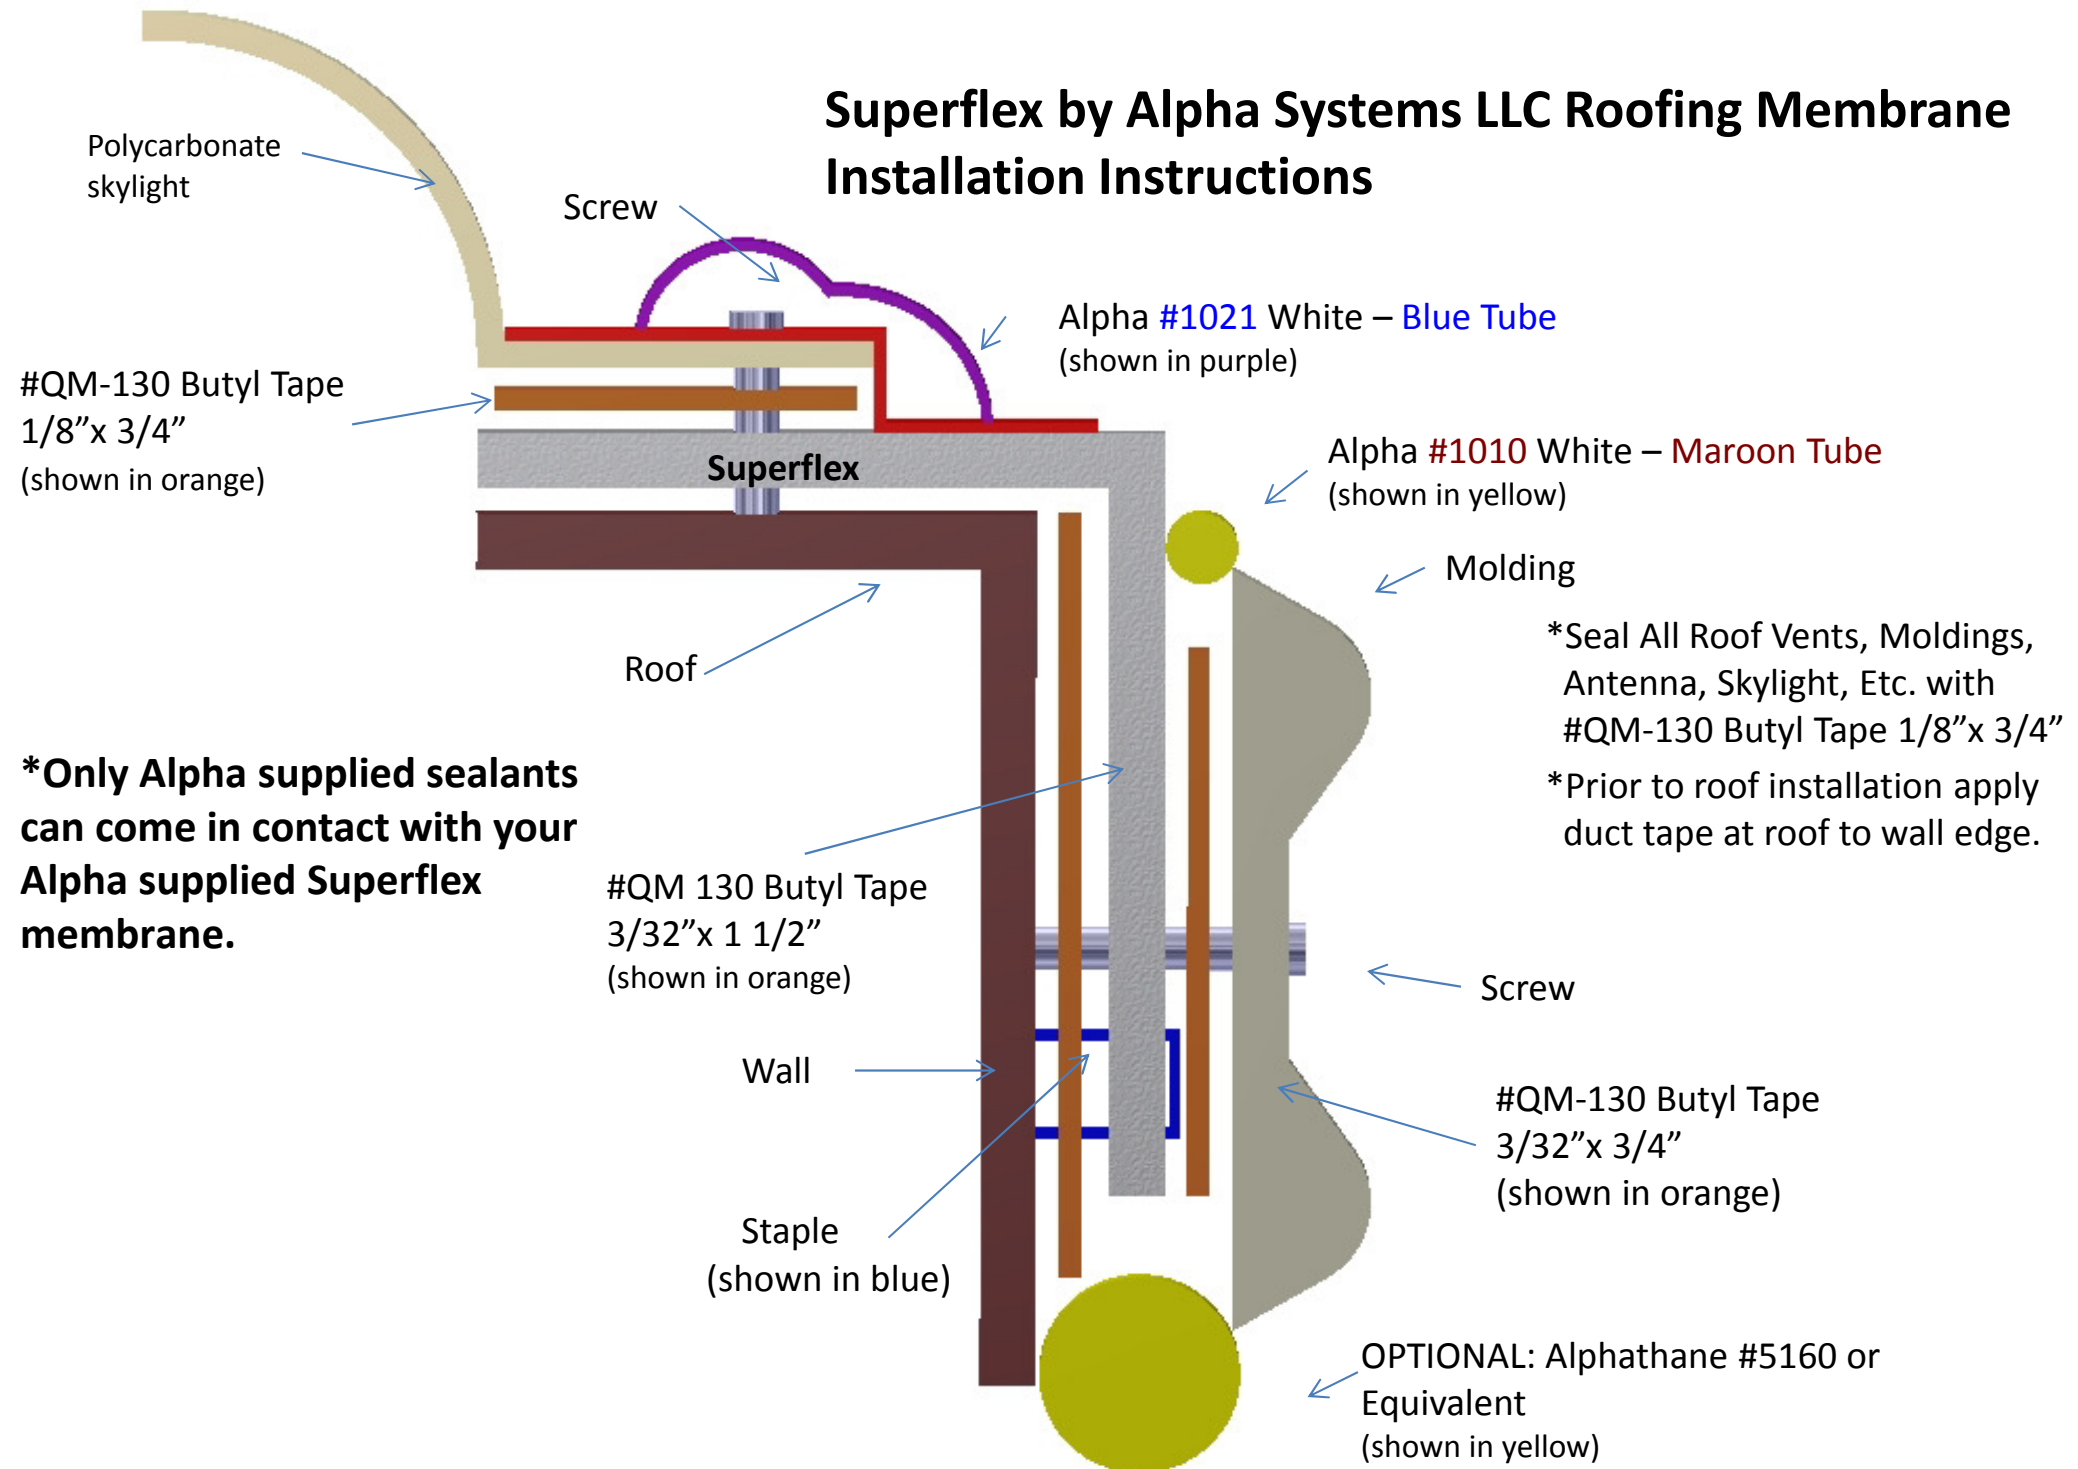

***Only Alpha supplied sealants can come in contact with your Alpha supplied Superflex membrane.**

*Seal All Roof Vents, Moldings, Antenna, Skylight, Etc. with #QM-130 Butyl Tape 1/8" x 3/4"

*Prior to roof installation apply duct tape at roof to wall edge.