


Water Tank Kit

Models: 11914, 11915, 11916, 11917 Installation and Operation Instructions

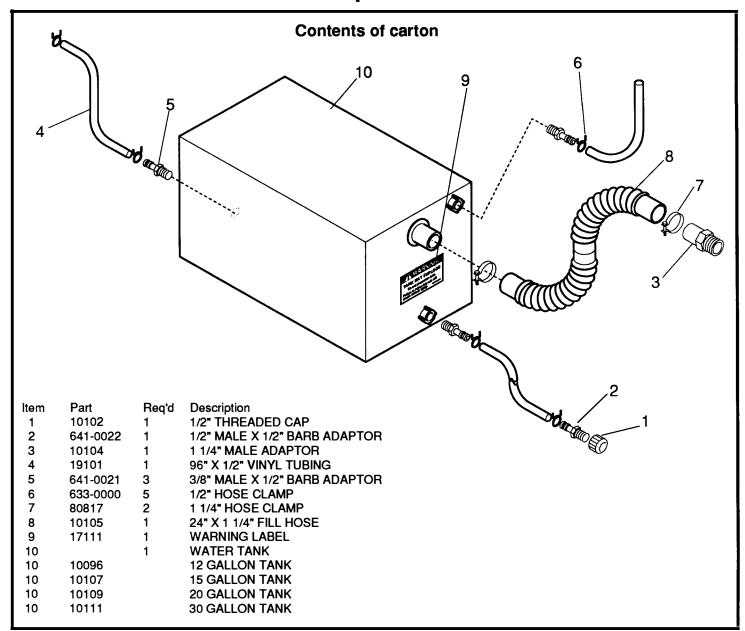

Tools required - Slotted screwdriver, Cresent wrench, and Pliers



Assembly instruction


Mount tank securely to vehicle to prevent loosing and damage to tubing and clamps.

Push fill hose over inlet until it is snug against tank. Secure with 1 1/4" clamp.

Screw adaptor into fill inlet. Push fill hose over adaptor and secure with 1 1/4" clamp.

Cut off 12" of tubing for vent line. Screw adaptor into tank (vent port). Secure tubing to adaptor with 1/2" hose clamp.

For proper venting position end of tube higher than tank.

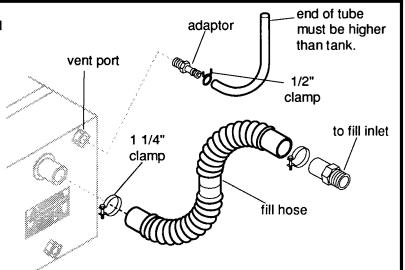

Screw adaptor into tank (supply port).

Secure tubing to adaptor with 1/2" hose clamp.

Route tube to vehicle water pump.

Cut off excess tubing(excess will be used for (drain line).

Secure tube to water pump with 1/2" hose clamp.

