
WATER TANK KIT

P/N's 11914, 11915, 11916, 11917


TOOLS REQUIRED: Slotted screwdriver, crescent wrench and pliers.

ASSEMBLY INSTRUCTIONS:

- Mount tank securely to vehicle to prevent loosening and/or damage to tubing and clamps.
- 2. Push fill hose over inlet until it is snug against tank. Secure with 1.25" clamp.
- 3. Screw adapter into fill inlet. Push fill hose over adapter and secure with 1.25" clamp.
- 4. Cut off .50" of tubing for vent line. Screw adapter into tank (vent port). Secure tubing to adapter with .50" hose clamp.
- 5. For proper venting, position end of tube higher than tank.

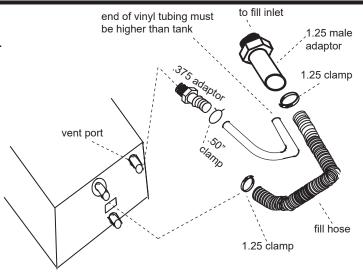


- 1. Screw adapter into tank (supply port).
- 2. Secure tubing to adapter with .50" hose clamp.
- 3. Route tube to vehicle water punp.
- Cut off excess tubing (excess will be used for drain line).
- 5. Secure tube to water pump with .50" hose clamp.

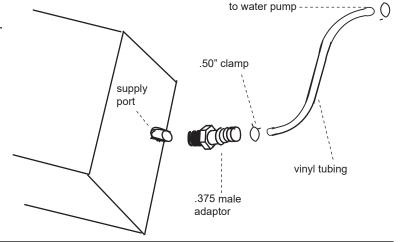

- Screw adapter into tank (drain port).
- 2. Secure excess tubing to .375" male adapter with .50" hose clamp:
- 3. Secure .50" male adapter to tubing with .50" hose clamp.
- 4. Put threaded cap on.

(To drain, remove threaded cap.)

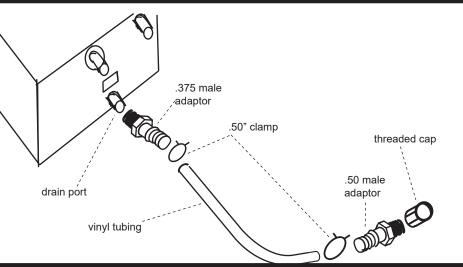



WATER TANK KIT

P/N's 11914, 11915, 11916, 11917

PARTS:

