


INSTALLATION INSTRUCTIONS

359NDK DUCTLESS CONVERSION KIT FOR THRU SOFFIT VENTING FOR USE WITH PM500 POWER MODULE

1. Install PM500 per installation instructions shipped with power module.
2. Remove aluminum filters and attach **non-ducted filters** furnished with kit. Refer to installation instructions provided with filters.
3. Remove backdraft damper. (Damper supplied with power module.)
4. Install the 6" round to 7" round **transition** over exhaust of unit.
5. Connect **7" round duct** to transition.
6. Cut hole in bottom of **soffit** to allow clearance for the **90° angle boot**.
7. Locate center of **4¼" x 10¼" opening** on soffit - at **horizontal centerline of hood** and **25"** above top of **liner**.
8. Layout 4¼" x 10¼" pattern and cut opening in soffit.
9. Insert 90° angle boot into soffit opening and connect boot to 7" round duct.
10. Install **grille** (included) into soffit opening.
11. Use duct tape to make all connections secure and air tight.

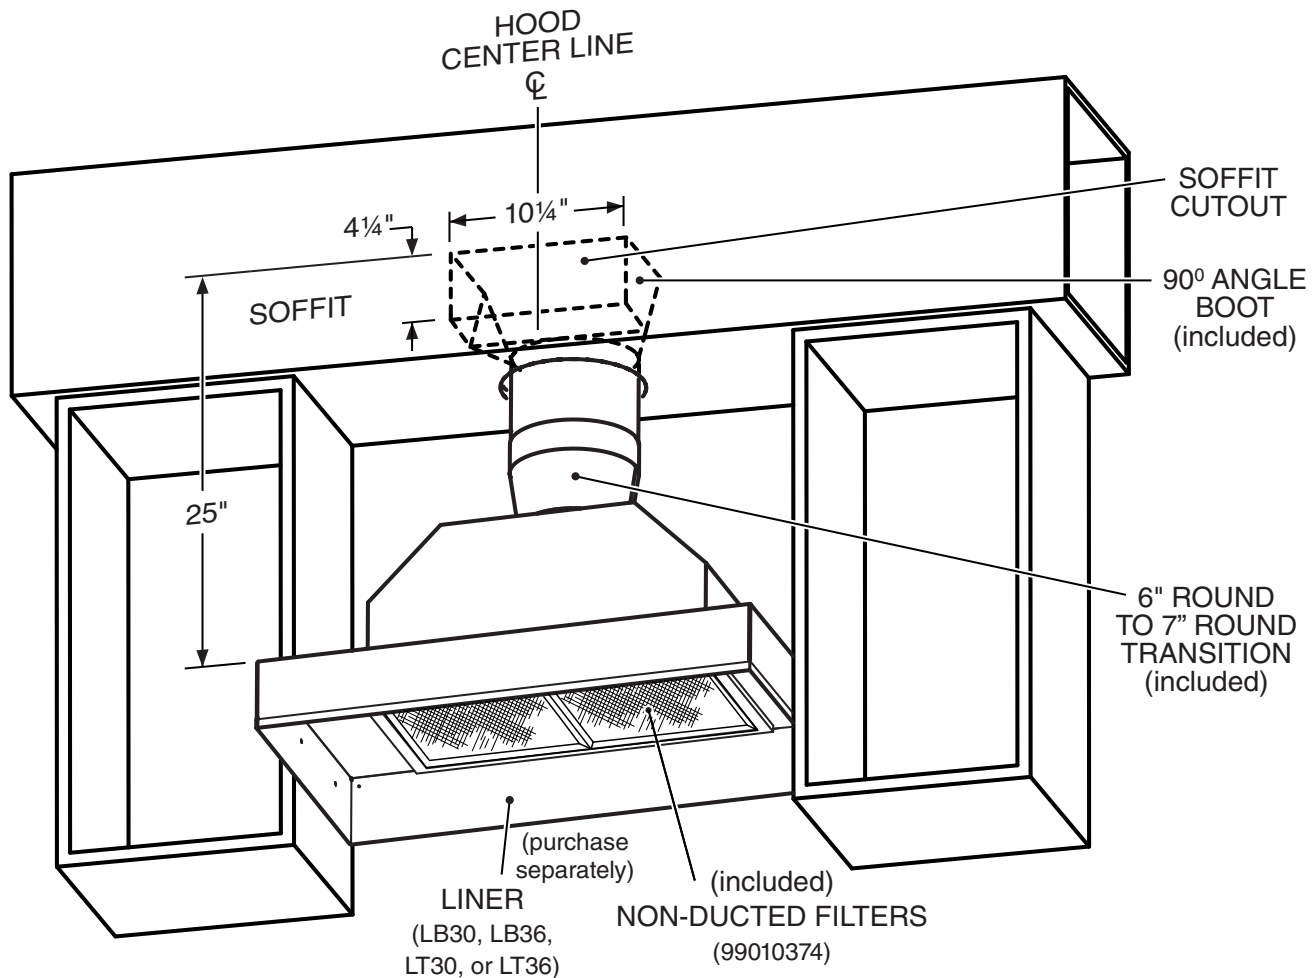

99045562A