

## THERMOSTAT KIT

For use with Broan Model 114 or NuTone Model 9114NT Kickspace Heater

# READ AND SAVE THESE INSTRUCTIONS

## WARNING


All wiring and electrical work must be in compliance with the National Electrical Code and any local codes, where applicable.

Always disconnect all electrical power at fuse box or service panel before wiring to prevent possible injury from electrical shock.

## THERMOSTAT INSTALLATION

**NOTE:** The thermostat control circuit must be wired prior to the wiring of the heater unit.

1. Turn off power at service entrance before wiring thermostat.

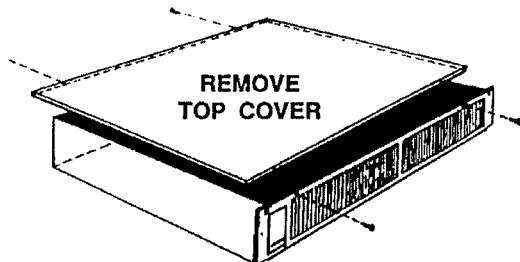

2. Remove the top cover from the heater.
3. Remove the 5/8" knockout located on the left side of the front panel (use a screwdriver to remove the knockout). Also remove the two plastic hole plugs (see illustration).
4. Install thermostat from back side of front panel and fasten in place, from front, with two screws and washers provided (see illustrations).
5. Attach temperature control knob by gently pushing it on to the thermostat shaft. Flats on shaft and knob must line up for proper installation (do not force control knob onto shaft).
6. Remove **black** wire from thermal fuse and attach it to thermostat terminal marked "4".
7. Remove **white** wire from temperature limit terminal marked "1" (Note: the other end of this wire is attached to incoming field wiring) and attach it to the thermostat terminal marked "1".
8. Attach **black** thermostat wire to thermal fuse and **white** thermostat wire to the temperature limited marked "3".
9. Refer to the installation instructions provided with the heater to complete the installation.

