




MODEL CWT45 SOLAR PAV THERMOSTAT

Installation Instructions

STEP 1

Cut and remove this wire tie.

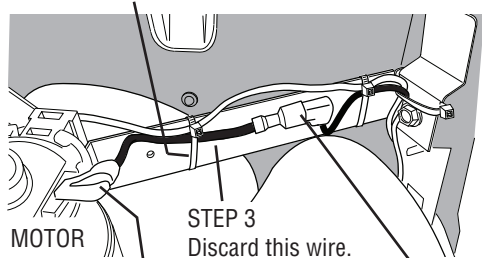

MOTOR

STEP 3


Discard this wire.

STEP 2

Disconnect wire from motor and here.

STEP 4


Install thermostat with hardware (provided).

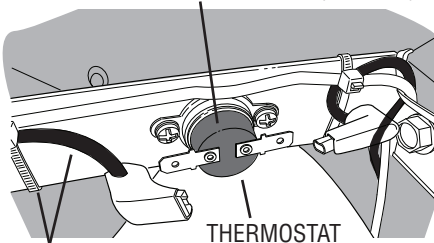

THERMOSTAT

STEP 5

Connect new black wire (provided) to motor and secure with new wire tie (provided).

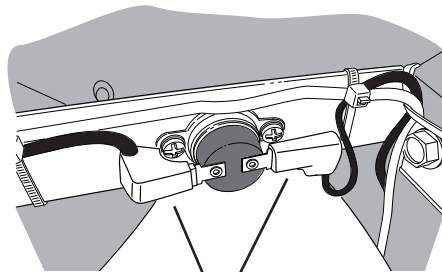

STEP 6

Connect wires to thermostat as shown.

Learn more about [other home heating & cooling by Broan-NuTone on our website.](#)