


# 6000# Jack Kit and Spacer/Cross-Tie Kit: Straight-Acting Jacks

**Application:** Mounting Straight-Acting Jacks on the FRONT OF FORD F53, 2004 thru 2006 chassis with 19.5"-22.5" TIRES.

**Mfr. #: AP34438 6000# Front Jack Kit**  
**Includes:** 2 - AP34583 Jack 6000x15 AMF WS  
 1 - AP35037 Hardware Kit 1/2"

**Mfr. #: 1 - AP34443 Spacer/Tie Kit 6S 4F53F**  
**Includes:** 2 - AP34533 Mtg Brackets - AMFD/6SF  
 1 - AP34536 CrossTie - AMFD/6SF  
 1 - AP35035 Hardware Kit 7/16" W/WHR  
 1 - AP35036 Hardware Kit 7/16"

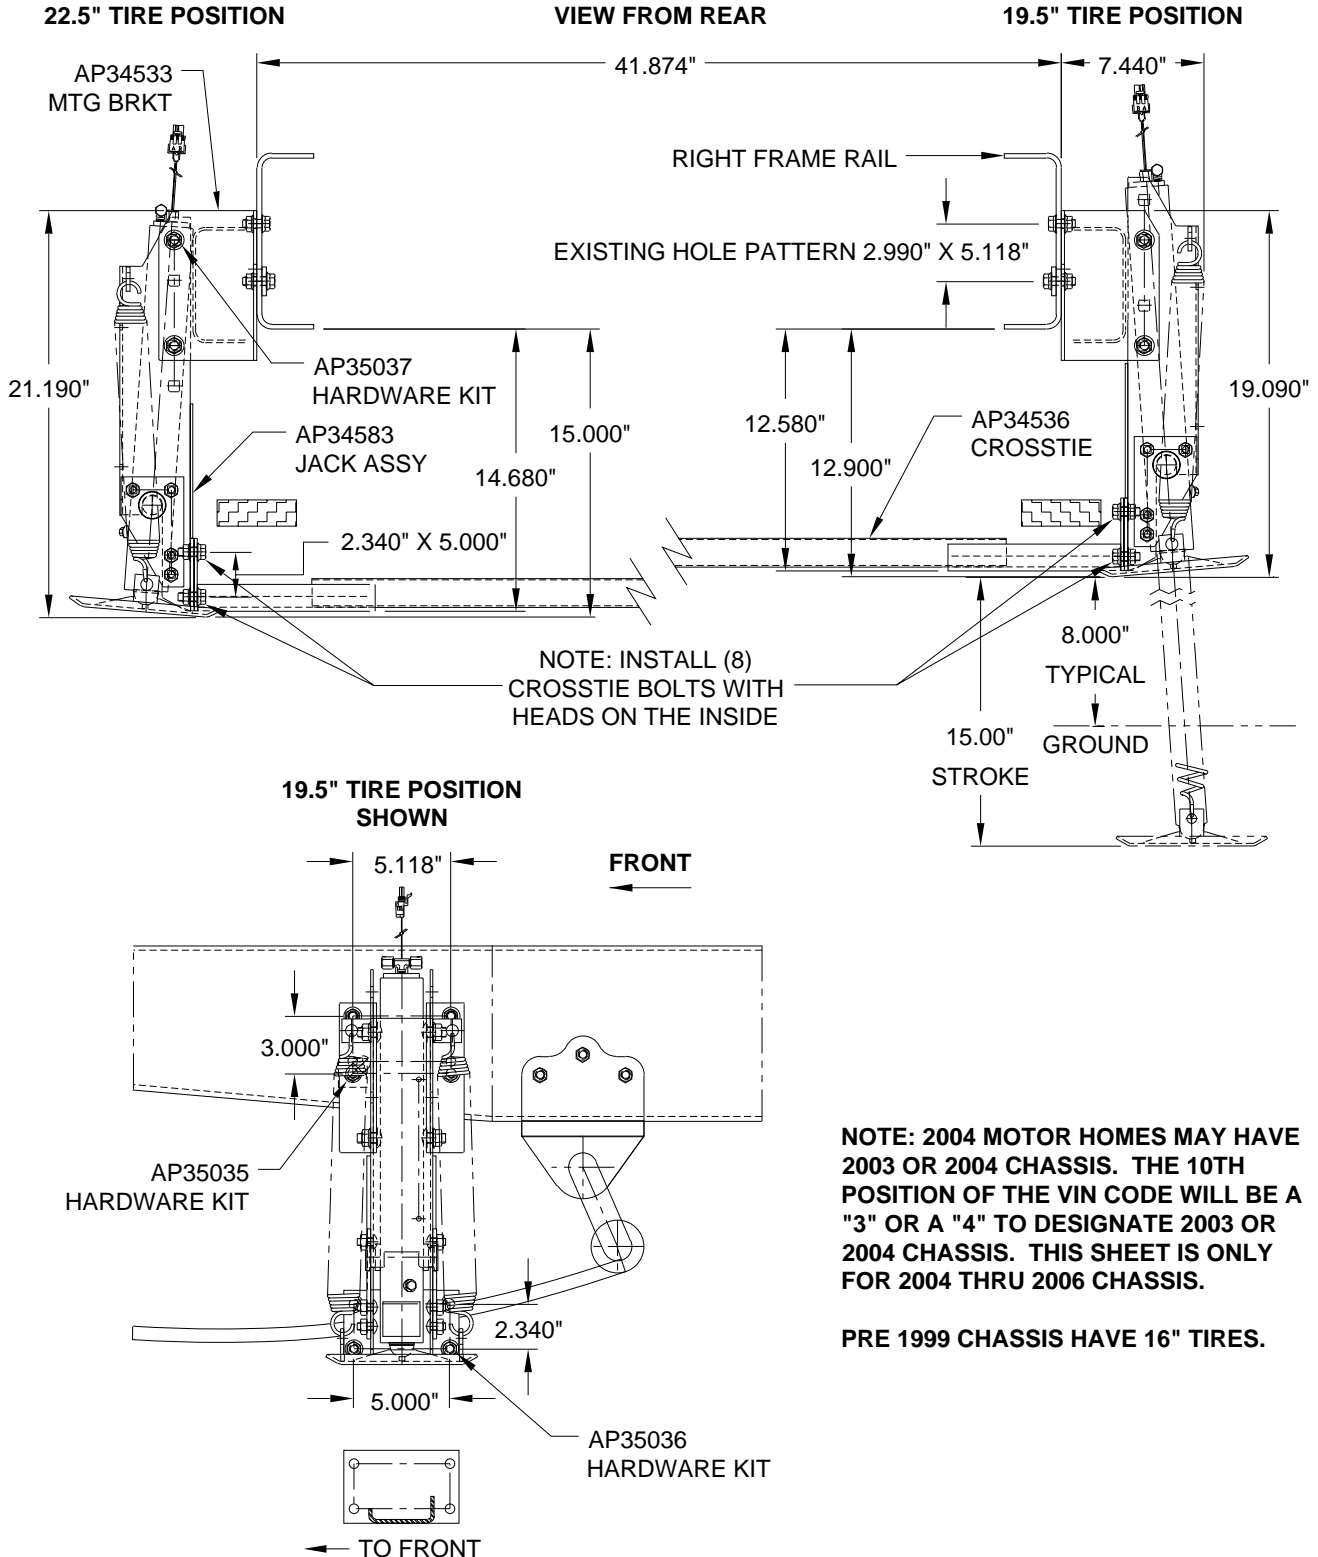

**CAUTION:** Follow CAUTIONS in Operator's and Installation Manuals concerning working under vehicles.

Looking for dependable trailer jacks, RV levelers and accessories? Rely on HWH for quality and long-lasting products.