


Installation Instructions

1710 • 1714 • 1790

IMPORTANT: Model Nos. 1710 / 1714 are for locker doors hinged on right or left as you face door, universal fit. Model No. 1790 is for locker doors hinged on the right as you face door.

TO INSTALLER: Bolts and locking nuts are packed separately in a plastic bag containing sufficient pieces for all locks in each shipping case.

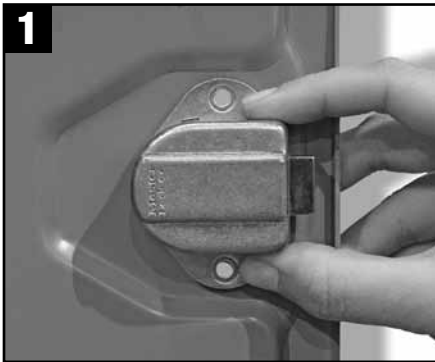

1 Position the lock on the inside of the locker door so that the two holes on the lock align with the two holes on the locker door. Note: the bolt should be positioned towards the outside edge of the locker door.



2 Hold the lock in place with one hand, and with the other hand, insert the bolts into the holes from the front of the locker through the door and the lock.



3 Place locking nuts on the bolts and hand-tighten.