

EASY SLIDE BAR RV

EASY INSTALLATION INSTRUCTIONS


STEP 1

Thoroughly clean area where Easy Slide Bar RV will be applied.




STEP 2

Carefully remove covering from adhesive strips. Use caution as adhesive is extremely powerful.

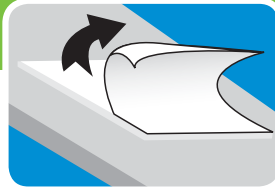


STEP 3

Place Easy Slide Bar RV in desired location within shower. Press and hold firmly in place for 30 seconds.

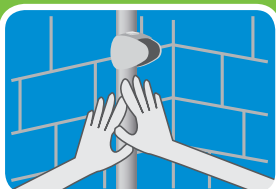

STEP 4

Insert your handheld shower into holder. Press and hold button on shower bar carriage and slide carriage to desired height. Release button to lock in position.

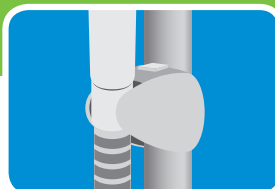

NO TOOLS NEEDED

STOP! NEED HELP?

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

If you need installation assistance, replacement parts or have questions regarding our warranty please contact customer service.

WARNING:

ADHESIVE IS EXTREMELY STRONG AND WILL STICK ON CONTACT.

Oxygenics is not responsible for any injury or damage resulting from improper installation, use, or removal of Easy Slide Bar RV.

