


## Soft Touch RV Assist Handle

**MODEL # AH-100 / AH-150**

### **Installation Instructions**

- 1) Place the Soft Touch rail at intended mounting location.
- 2) The mounting holes of the Soft Touch rail are offset, allowing you to secure the rail to your coach's door frame. The weight our rail will support depends on what it is mounted to. Be sure you are secured to the door frame or a stud in the wall of your coach.
- 3) Mark the four hole locations.
- 4) Pre-drill the holes using a  $\frac{1}{8}$ " drill bit.
- 5) Place waterproof caulking over the holes to prevent moisture from entering your coach's wall.
- 6) Mount your Soft Touch rail using the fasteners provided before the caulking sets up.

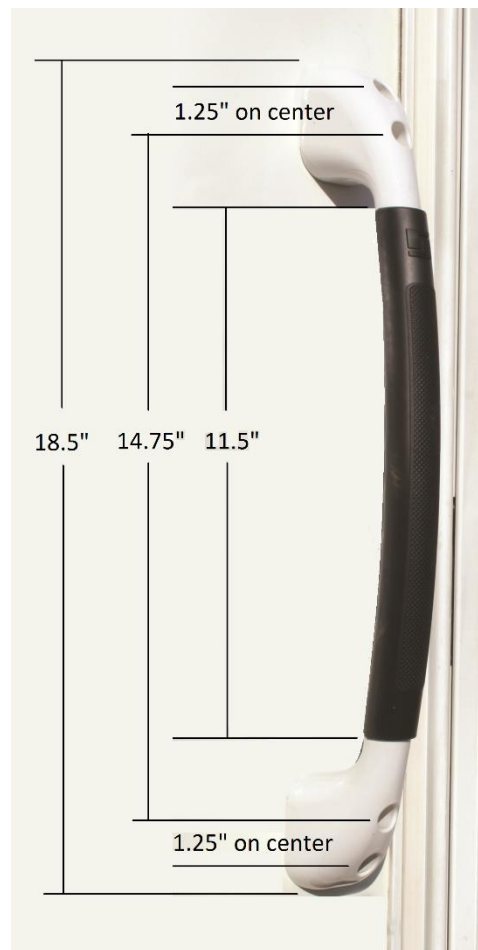

### **Bulk Pack Contents**

(10) Soft Touch Assist Rails

(10 sets of 4) 2  $\frac{1}{4}$ " x #18 Stainless Steel Fasteners