

OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.

IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS

A7770, A7771 FORTRESS GAS LOCK

APPLICATION: Dual Propane Tank Setups

A7770, A7771 INVENTORY LIST

- 1- Propane Lock Bracket
- 1- Propane Lock Handle
- 1- Washer SS (A7770 1/2" SAE) (A7771 3/8" SAE)
- 1- Pin Lock
- 1- Theft Deterrent Decal
- 1- Rubber Lock Spacer

ASSEMBLY

Step 1-

Between the two propane tanks, remove the handle from the threaded rod.


Step 2-

Place the **Propane Lock Bracket** over the threaded rod with the feet pointing down and facing towards either Propane Tank. It will fit over the Propane Tank Cross Bar and Propane Tank Cover Bracket as seen in **Photo 3.1 and 4.1**.

Step 3-

Place the **Washer SS** over the threaded rod. Thread the **Propane Lock Handle** onto the threaded rod and tighten until the propane bottles are secure. Occasionally the threaded rod will not be tall enough to fully install the Propane Lock Handle. In most cases, the threaded rod can be unscrewed from the bottom to allow for extra height. Rotate the **Propane Lock Handle** so one of the locking holes lines up with the hole in the **Propane Lock Bracket** see **Photo 3.1**


Photo 3.1 - A7770

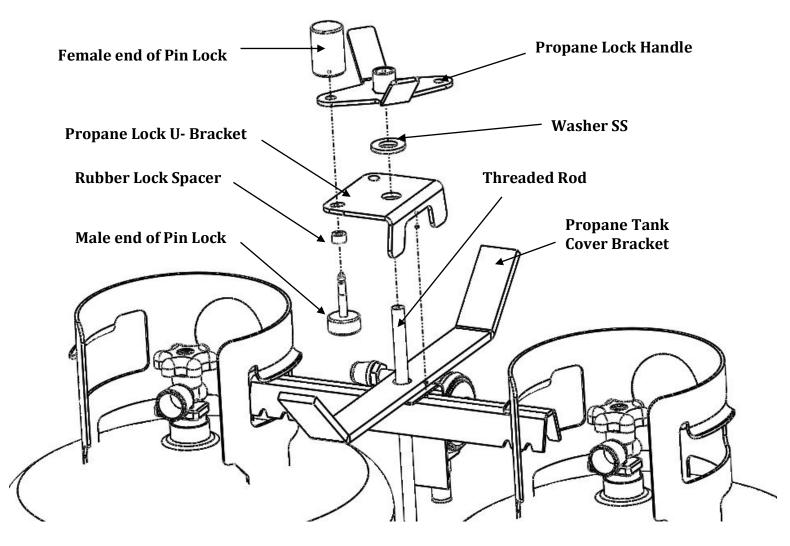

Step 4-

Place the **Rubber Lock Spacer** over the male end of the **Pin Lock** and then install the **Pin Lock** from the bottom side of the **Propane Lock Bracket**. With the key removed, push the female end of the **Pin Lock** onto the male end of the **Pin Lock** until you hear a "*snap*." Make sure to check that the **Pin Lock** is securely fastened by pulling the female end of the **Pin Lock** away from the male end, see **Photo 4.1**.

Photo 4.1- A7770

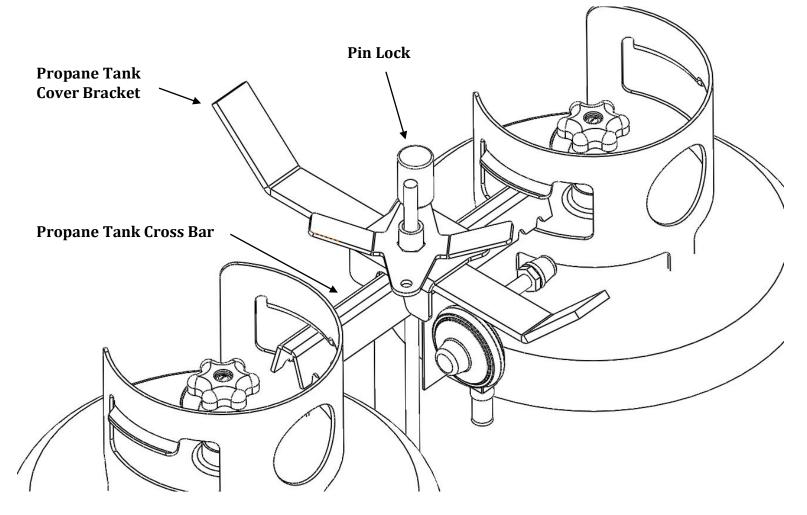

Step 5-

To remove the **Pin Lock**, insert the key and twist clockwise. Pull the two sides of the **Pin Lock** apart and remove from **Propane Lock Bracket** and **Propane Lock Handle**.

Step 6-

Apply the **Theft Deterrent Decal** onto the propane tank cover or the tank itself. (Photo 6.1)