



ACSCKIT Installation Guide

Tools Required:	Parts Supplied:
<ul style="list-style-type: none"> • Cross point screw driver (Phillips #2) • Vice Grips 	<ul style="list-style-type: none"> • ACSCKIT


Electrical Warning: *Prior* to installation, disconnect 115V AC or shut off A/C circuit breaker to prevent electrical shock. There may be a charge on the Capacitor until discharged.

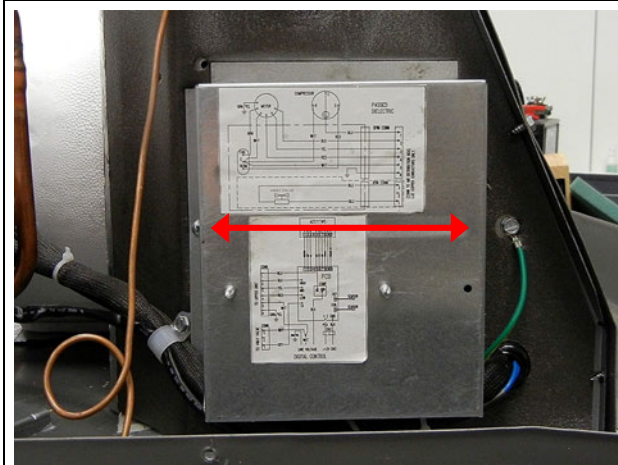


1. With the AC on a flat surface, remove outer shroud. Remove electrical box cover (2 screws).

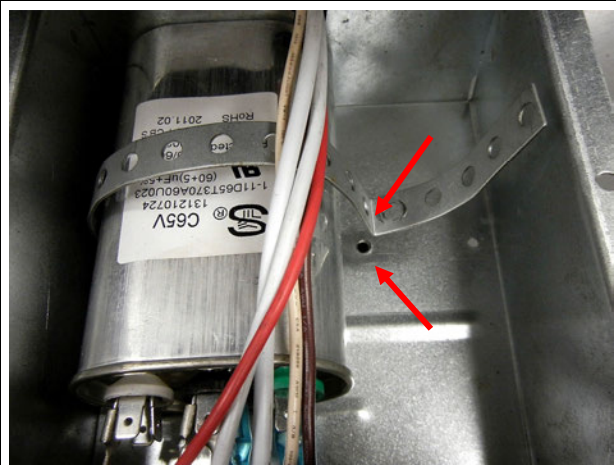

2. Remove screw to loosen mounting strap securing the run capacitor. With vise grips, flatten strap surrounding existing screw location.

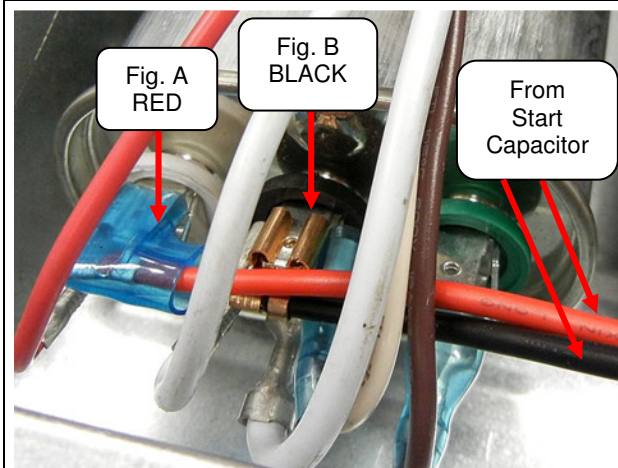

3. Connect wires from start capacitor to run capacitor. Connect RED wire to **HERM** terminal w/RED wire (Fig. A). Connect BLACK wire to **COMMON** terminal with WHITE wires (Fig. B).

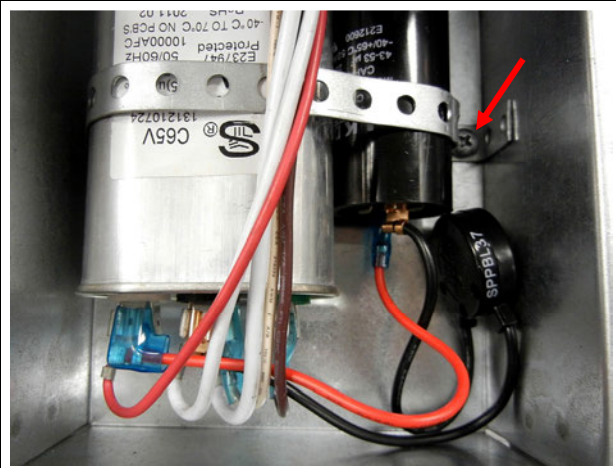

4. Place start capacitor next to run capacitor and secure with existing mounting strap (**note:** use other screw location as indicated by arrow). Replace electrical box cover and outer shroud.