


Starfrit

Electronic Kitchen Scale

P.2

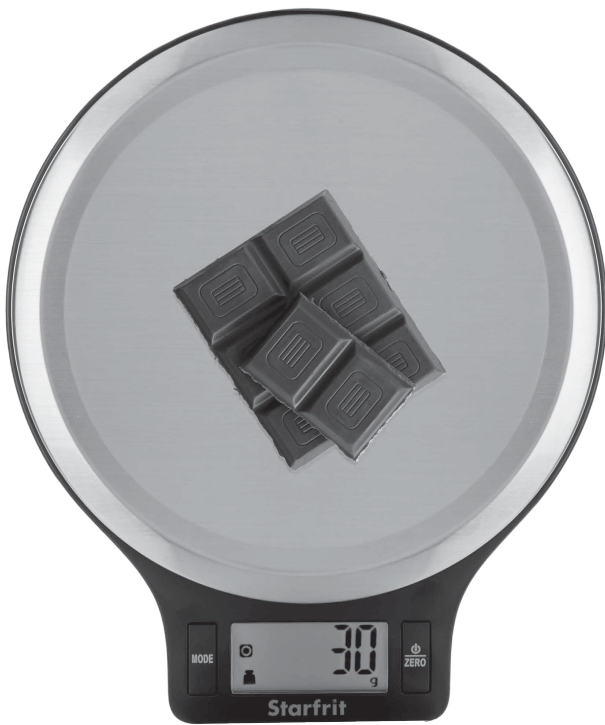

INSTRUCTIONS FOR USE

INSTRUCTIONS FOR USE AND CARE

(Read the instructions before use)


FEATURES / SPECIFICATIONS

- Capacity: 11 lb / 5 kg
- Accuracy: 0.05 oz / 1 g
- Measures not only weight but also volume of milk and water.
- Unit conversion feature
 - Weight: grams, pounds and ounces
 - Volume: millilitres and fluid ounces
- Low battery and overload indicators.
- Zero and tare functions.

BATTERIES


2 x AAA (1.5V) batteries (included)

TO REPLACE BATTERIES

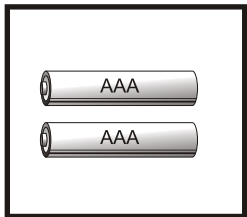

- 1 Open battery case cover on the back of scale.
- 2 Remove old batteries.
- 3 Install new batteries by putting one side of the battery down first and pressing down the other side. Please pay attention to the polarity.
- 4 Close battery case cover.


LCD

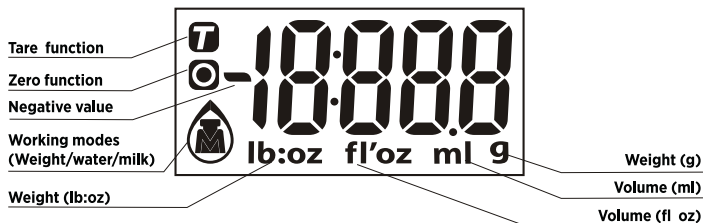

BUTTONS

- Unit conversion (under the scale)
- Mode conversion
- On/Off and also Zero and Tare functions

WORKING MODES

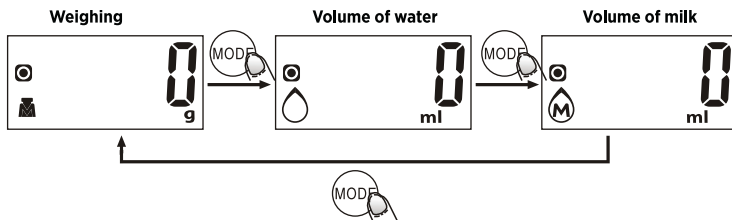


TO CONVERT WEIGHT UNITS

Scale has an automatic conversion feature which allows you to weigh units in Metric (grams / millilitres) and Imperial (pounds / ounces).

Press **(MODE)** button to choose your working mode (weight, volume of water or volume of milk).


Then, press **(UNIT)** button to convert between the two systems (Metric or Imperial)

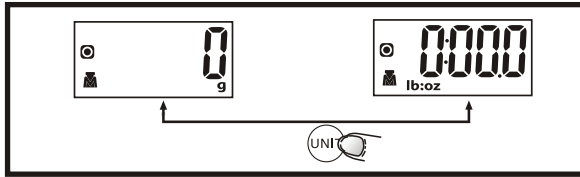

*When setting weighing unit in Metric (g), the default volume unit is in millilitres.

*When setting weighing unit in Imperial (lb), the default volume unit is in fluid ounces.

TO WEIGH

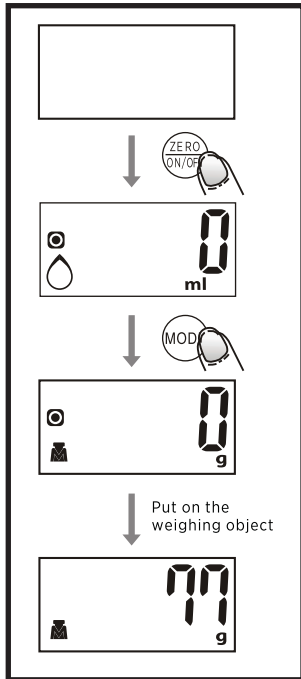


1. WEIGHING MODE

- A. Put the scale on a hard and flat surface.
- B. When using a bowl, it is important to center it on the glass platform before turning on the scale.
- C. Press **(ZERO ON/OFF)** button to turn on the scale.
- D. LCD will wake up showing all segments lit up. Then will show 0g. Press **(MODE)** button to change mode if needed.
- E. You can start weighing now. Place your food at the center of the weighing platform or in the bowl you are using.
- F. If you are weighing water or milk, press **(MODE)** button to choose the volume weighing mode.

2. VOLUME WEIGHING MODE

A. Put the scale on a hard and flat surface.


B. Press  button to turn on the scale.


C. Wait until LCD shows “0” and then press  button to choose either water or milk mode.

D. Place the empty container in which you will pour your liquid on the scale.


E. Then, press  button to reset the LCD.


F. Pour your liquid into the container.
LCD shows the volume you are pouring.

G. Press  button to go back to the regular weighing mode.

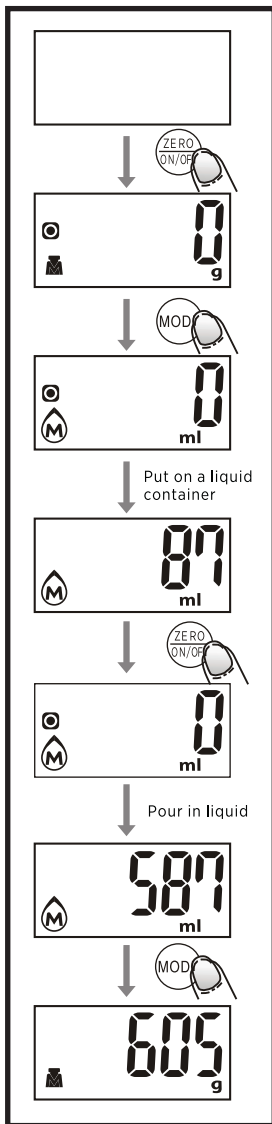


ZERO AND TARE FUNCTIONS


The zero and tare functions allow you to weigh items consecutively without having to remove the mass already on the platform. For example, if you are using a bowl, these functions allow you to weigh the content of the bowl without counting the weight of the bowl. Press  to use these functions.

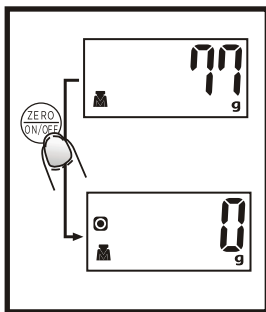



• ZERO FUNCTION

When sum of all loads on scale is less than 200 g / 7 oz, the LCD will show “0 g” each time  button is pressed. Icon “o” will show on left of LCD, indicating zero function is active. Maximum weight capacity is not reduced by tare amount if less than 200 g.


• TARE FUNCTION

When sum of all loads on scale is over 200 g / 7 oz, the LCD will show “0 g” each time  button is pressed. Icon “T” will show on left upper corner of LCD, indicating tare function is active. Maximum weight capacity is reduced by tare amount.

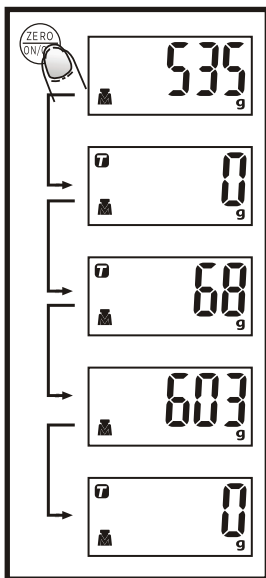


Under this condition, if you press  button, you will see the total weight of all loads.


AUTOMATIC SHUT-OFF

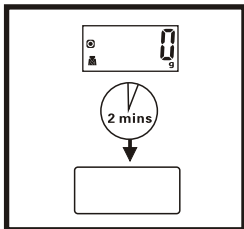



Auto shut-off occurs if display shows “0” or shows the same weight reading for 2 minutes.

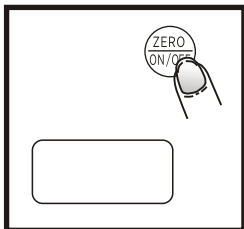
MANUAL SHUT-OFF



To maximise battery life, always press  button to turn off the scale after using.

- When LCD shows “0”, press  button to turn off the scale.
- When LCD shows a weight reading, press  button for 3 seconds to turn off the scale.

LOW BATTERY & OVERLOAD INDICATORS

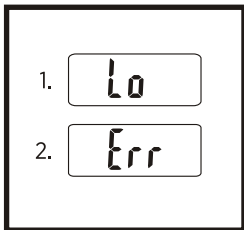

1. Low battery power

Please replace battery.

2. Overload

Remove item to avoid damage.

Maximum capacity for this scale is 11 lb / 5 kg.

CLEANING AND CARE

- Clean the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
- All plastic parts should be cleaned immediately after contact with fat, spices, vinegar and strongly flavored/colored foods.
- Avoid contact with acid citrus juices.
- Always use the scale on a hard flat surface.
- Not for commercial use.