



JUMP STARTING
POWER PACK

70

QUICK START GUIDE

Model N70



GETTING TO KNOW WEEGO 70




CHARGE UP YOUR WEEGO 70

When you unpack your new Weego 70 for the first time, charge it up to 100% with either the wall or car charger and included USB-C charging cord. Remember to recharge your Weego 70 every 6 months, even when you're not using it – it will help extend its lifespan.

POWERING ON/OFF

There's a **Power ON/OFF Button** on the back of your Weego 70. While powered "ON", the blue power button will remain illuminated. *Make sure you turn OFF your Weego 70 after every use; leaving it on slowly drains the battery.*

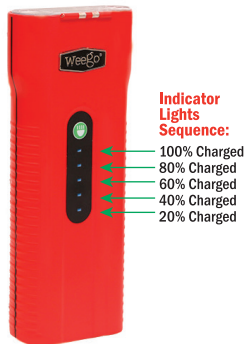

It takes 3.5 hrs. to fully charge. The indicator lights will flash one by one while the unit is charging. A solid light indicates a completed level of charge.

JUMP STARTING

BEFORE YOU JUMP

- ➔ Read all instructions and safety information prior to using this product. Improper use of this product will void your warranty and may result in product damage, excess heat, toxic fumes, fire, and other unsafe conditions for which Weego is not responsible.
- ➔ Read vehicle owner's manual first: it may have specific cautions and instructions about jumping your engine.
- ➔ This product is for use on **12V Lead-Acid** batteries only! **DO NOT** use this product on any other voltage battery, such as 6V, 24V, etc. **DO NOT** use this product on lithium-ion batteries.
- ➔ Never jump an engine in an enclosed area.
- ➔ Put your vehicle in **PARK** and engage the emergency brake (boats and powersports' vehicles should be put in **NEUTRAL**).
- ➔ **TURN OFF ALL ELECTRONICS!** – air conditioner, radio, lights, etc.
- ➔ Remove any devices attached to your Weego 70.
- ➔ Never leave your Weego 70 connected to your engine's battery unless actively jumping.
- ➔ Always disconnect the **Smarty Clamps**® from your Weego 70 when not in use.



Connect Clamps



Power ON



Attach Black (-), Then Red (+)



When You Have **SOLID GREEN LIGHT On Your Smart Box, Start Your Engine**



Once it Starts, Disconnect Clamps from Weego 70



Detach Clamps From Battery

JUMP STARTING YOUR ENGINE

1. Ensure your engine is completely OFF.
2. Securely connect the **Smarty Clamps**[®] to your Weego 70, then power ON.
3. Attach **BLACK** clamp to your battery's negative (-) terminal, then the **RED** clamp to your battery's positive (+) terminal. Adjust your **Smarty Clamps**[®] to achieve MAXIMUM contact with the terminals. Poor connections will prevent you from starting your engine! *Clear off any dirt or build-up with a wire brush or a dry towel before connecting your clamps.*
4. Place your Weego 70 in a secure location or suspend using the provided hook & lanyard so it won't fall. Check your **Smarty Clamps**[®] lights.
5. When you have a **SOLID GREEN READY** light, start your engine. *If the engine doesn't start, turn off your vehicle and check your **Smarty Clamps**[®] lights.*
6. After a successful start, quickly disconnect the **Smarty Clamps**[®] from your Weego 70.
7. Detach the **Smarty Clamps**[®] from the battery.
8. You're now good to go - be sure to run your engine for at least 15 minutes before shutting it off again so it has time to recharge your battery.

If you are having issues getting your engine started, see the **Troubleshooting** section in your quick start guide, owners manual or on myweego.com for further details and assistance.

WARNING!

Exposed Metal Jaws May Be HOT After Use!

UNDERSTANDING YOUR *Smarty Clamps*[®]

Your *Smarty Clamps*[®] have a “smart” box that will help guide you through a jump with both sight and sound. It will let you know when it is safe to jump or if there is an error.



● **READY** **Solid Green Light, No Sound**

Smarty Clamps[®] detect that you have a good connection and you are ready to jump.

● **REVERSE +/-** **Solid Red Light + Solid Beep**

You attached the *Smarty Clamps*[®] on the wrong terminals. Make sure the **BLACK** clamp is attached to the battery's **NEGATIVE (-)** terminal, and the **RED** clamp is attached to the battery's **POSITIVE (+)** terminal. If not attached properly, Weego 70 will not let you jump your engine.

●● **COOL DOWN** **Flashing Red/ Green Light**
WAIT FOR ●

The Weego battery overheats after long cranks or excessive current draw. Detach the *Smarty Clamps*[®] from the battery and give the unit up to 3 minutes to cool down. Then, repeat steps 2-5 under *Jump Starting Your Engine*.

○●● **SEE REVERSE** **No Light/Flashing Green Light**

Either you have a poor connection, or your battery voltage is near 0 volts. Press the **BYPASS*** button, when **SOLID GREEN** light is on, start engine.

Note: If you cannot complete the jump the system voltage of your vehicle may not be compatible with your Weego 70 (for 12V vehicles only).

**Using BYPASS feature will override safety features.*



Bypass Button

USB-A & USB-C CHARGING

Charge your phone, tablet and other portable devices with your Weego 70. Weego 70 comes equipped with **Detect-o-Matic™** USB Fast Charging.

You can charge your USB-A devices by plugging in your own USB-A cord into your Weego 70 USB-A port OR by plugging the your own USB-C to USB-C cord into your Weego 70 USB-C input/output port. Connect to your device, power on Weego 70 and start charging!



USB-A
Output Port

USB-C
Input/Output Port



LIGHTING

Your Weego 70 comes with a 600 lumen LED flashlight. Power on your Weego 70, then briefly press and release the flashlight button to initiate the following sequences:

- 1st click: Normal
- 2nd click: Strobe
- 3rd click: SOS
- 4th click: OFF

Your Weego 70 will give you **up to 15 hours of flashlight time** and **up to 30 hours of strobe & SOS light** on a full charge.



Flashlight Button

Learn more about battery chargers and jump starters we have.