

L5



CE-L5

ECCOTEMP
THE FUTURE OF EFFICIENCY



ECCOTEMP L5 & CE-L5 PORTABLE TANKLESS

WATER HEATER USE & CARE MANUAL

WITH INSTALLATION INSTRUCTIONS FOR THE INSTALLER

WARNING
FAILURE TO READ AND FOLLOW ALL
INSTALLATION INSTRUCTIONS EXACTLY,
MAY RESULT IN A FIRE OR EXPLOSION
CAUSING PROPERTY DAMAGE, PERSONAL
INJURY, OR DEATH.
ALWAYS CHECK FOR GAS LEAKS WITH A SOAPY
WATER SOLUTION BEFORE ATTEMPTING TO
USE THE WATER HEATER.

Congratulations!

You've just purchased a new Eccotemp L5 portable tankless water heater. This will open a world of enjoyment to going tankless!

We highly suggest you take the time to read through all of the safety and installation procedures in this manual, before attempting to install your new water heater.

General Safety	3-5
Features and Benefits	6-7
Care and Maintenance	8-9
Getting Started	10
Use and Starting	11-12
Troubleshooting Guide	13-14
Product Comparison	15
Warranty Information	16



FOR YOUR RECORDS

Write the model and serial numbers here:

You can find them on a label on the appliance and/or packaging.

Staple sales slip or canceled check here.

Proof of the original purchase date is needed to obtain service under the warranty.



READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your water heater properly. A little preventive care on your part can save you time and money over the life of your water heater. You'll find many answers to common problems in the Troubleshooting Guide. If you review the chart of Troubleshooting Tips first you may not need to call for service.



READ THE SAFETY INFORMATION

Your safety and the safety of others are very important. There are many important safety messages in this manual and on your water heater. Always read and obey all safety messages. This is the safety alert symbol. Recognize this symbol as an indication of Important Safety Information! This symbol alerts you to potential hazards that can kill or hurt you and others.


All safety messages will follow the safety alert symbol and the words: **"DANGER"**, **"WARNING"**, **"CAUTION"** or **"NOTICE"**.

These words mean:

 **DANGER** - An imminently hazardous situation that will result in death or serious injury.

 **WARNING** - A potentially hazardous situation that could result in death or serious injury and/or damage to property.

 **CAUTION** - A potentially hazardous situation that may result in minor or moderate injury.

 **NOTICE:** Attention is called to observe a specified procedure or maintain a specific condition.

IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING

Be sure to read and understand the entire Use and Care Manual before attempting to install or operate this water heater. It may save you time and money. Pay particular attention to the Safety Instructions. Failure to follow these warnings could result in serious bodily injury or death. Should you have problems understanding the instructions in this manual, or have any questions, STOP, and get help from a qualified service technician, or the local gas utility.

DANGER! PROPERLY INSTALL WATER HEATER





Failure to properly install the water heater outdoors as outlined in the Installation Instructions in this manual can result in unsafe operation of the water heater. To avoid the risk of fire, explosion, or asphyxiation from carbon monoxide, never operate this water heater unless it is installed properly and has an adequate air supply for proper operation. Be sure to inspect the flue terminal for proper installation at initial start-up; and at least annually thereafter. Refer to the Care and Cleaning section of this manual for more information regarding flue terminal inspection.

WARNING!




Gasoline, as well as other flammable materials and liquids (adhesives, solvents, paint thinners etc.), and the vapors they produce are extremely dangerous. DO NOT handle, use or store gasoline or other flammable or combustible materials any where near or in the vicinity of a water heater or any other appliance. Be sure to read and follow the labels on the water heater, as well as the warnings printed in this manual. Failure to do so can result in property damage, bodily injury or death.

 **DANGER**



Flammable Vapor

<p> Vapors from flammable liquids will explode and catch fire causing death or severe burns.</p> <p>Do not use or store flammable products such as gasoline, solvents or adhesives in the same room or area near the water heater.</p> <p>Keep flammable products :</p> <ol style="list-style-type: none"> 1. Far away from heater 2. In approved containers 3. Tightly closed 4. Out of children's reach 	<p>Water heater has a main burner flame. The main burner flame</p> <ol style="list-style-type: none"> 1. Can come on at any time and 2. Will ignite flammable vapors. <p>Vapors:</p> <ol style="list-style-type: none"> 1. Cannot be seen 2. Are heavier than air 3. Go a long way on the floor 4. Can be carried from other rooms to the main burner flame by air currents.
<p>Installation:</p> <p>Do not install water heater where flammable products will be stored or used unless the main burner flame is at least 18" above the floor. This will reduce, but not eliminate, the risk of vapors being ignited by the main burner flame.</p>	
<p>Read and follow water heater warnings and Instructions. If owners manual is missing, contact the retailer or manufacturer.</p>	



⚠ DANGER!

NATURAL GAS AND LIQUEFIED PETROLEUM MODELS

Both liquid propane and natural gas have an odorant added to aid in detecting a gas leak. Some people may not physically be able to smell or recognize this odorant. If you are unsure or unfamiliar with the smell of liquid propane or natural gas, ask the gas supplier. Other conditions, such as “odorant fade”, which causes the odorant to diminish in intensity, can also hide or camouflage a gas leak. Always check with commercial leak detector or soapy water.

- Gas detectors are recommended in liquid propane and natural gas applications and their installation should be in accordance with the detector manufacturer’s recommendations and/or local laws, rules, regulations or customs.
- Water heaters utilizing liquid propane gas are different from natural gas models. A natural gas water heater will not function safely on liquid propane gas and vice versa.
- No attempt should ever be made to convert the water heater from natural gas to liquid propane gas. To avoid possible equipment damage, personal injury or fire, do not connect the water heater to a fuel type not in accordance with the portable tankless water heater data plate; propane for propane portable tankless water heaters and natural gas for natural gas portable tankless water heaters. These portable tankless water heaters are not certified for any other fuel type.
- Liquid propane appliances should not be installed below grade (for example, in a basement) if such installation is prohibited by federal, state and/or local laws, rules, regulations or customs.
- Propane or liquid propane gas must be used with great caution. It is heavier than air and will collect first in lower areas making it hard to detect at nose level.
- Before attempting to light the water heater, make sure to look and smell for gas leaks. Use a soapy solution to check all gas fittings and connections. Bubbling at a connection indicates a leak that must be corrected. When smelling to detect a gas leak, be sure to sniff near the floor also.
- It is recommended that more than one method, such as soapy solution, gas detectors, etc., be used to detect leaks in gas applications.

Notice: If a gas leak is present or suspected:

- **DO NOT attempt to find the cause yourself.**
- **DO NOT try to light the water heater.**
- **DO NOT touch any electrical switch.**



ADDITIONAL WARNINGS

1. Do not leave unattended.
2. The exhaust gas and top of the portable tankless water heater is **HOT!** Do not place hands or any foreign object near the top of the heater.
3. Do not use in high wind conditions.
4. If the smell of gas is detected, turn off the gas valve at the tank immediately! Do not use flame for leak detection.
5. Use only Liquid Propane.
6. Use only outdoors.
7. Do not over tighten the gas regulator connection to the portable tankless water heater with a wrench. This may cause a crack in the gas regulator.

The Purpose and Benefits the L5

The Eccotemp L5 is a portable liquid propane fired water heater capable of delivering 1 to 1.4 gallons of hot water almost anywhere. The portable tankless water heater has standard 1/2" NPT pipe fittings and an adapter for using a standard garden hose for inlet water supply.

The L5 is not a toy. People around the world use similar portable tankless water heaters to heat water for recreation use, safely, and reliably.

Gas is recommended to be supplied from a standard 20 pound propane cylinder (not included) such as used with outdoor grills. A regulator with hose is included with the heater.

A shower nozzle with on/off switch and multiple spray patterns is included.

Ignition is automatic and powered by 2 "D" cell batteries (not included). Burners come on when water flows, and off when the water is shut off. No pilot light!

There is an automatic 20 minute shutoff timer as an additional safety feature. This timer is reset each time operation stops or the shower head is turned off and then back on.

Ideal operating use with water pressure between 20-80 PSI.

Functions and Features

- **Water controlled automatic ignition:** Water pressure between 20-80 PSI and 0.75-1.0 GPM opens the ignition circuit for easy and convenient operation.
- **Auto-cut-off protection:** The auto-cut-off protection will shut the gas supply off immediately in the event of flameout to reduce the risk of gas leakage.
- **Removable drain valve** to avoid water pipe and regulator damage caused by freezing water*.
- **Anti-dry combustion protection:** The portable tankless water heater will shut off the gas supply in the event water stops flowing through the portable tankless water heater.


*Read the maintenance section on draining the portable tankless water heater entirely to avoid freeze related issues.

TEMPERATURE INCREASE PER GPM					
MODEL	Gas Setting	0.5 GPM	1.0 GPM	1.5 GPM	2.0 GPM
L5 Portable	Highest	96 °	48 °	32 °	25 °
	Lowest	34 °	17 °	11 °	9 °

*Temperature increases listed are based on use of the water heater under optimal conditions. Variable factors such as incorrect or imperfect installations and varying incoming water temperatures may yield different results.

TECHNICAL SPECIFICATIONS - PORTABLE	
Fuel Type	LPG (Liquid propane gas)
Model	L5
Activation Flow Rate	25 PSI
BTU/h	35,000
Related gas pressure	0.4 PSI
Ignition	Electric Pulse, D cell Battery Powered (No electrical connection required)
Protections	Auto-cut off water control, automatic ignition, anti-dry combustion protection, over-pressure overheating and flameout protection
Dimensions	11.5" x 17.0" x 4.7"
Pipe fittings	1/2" NPT, incoming/outgoing water & gas

Construction and parts of the L5

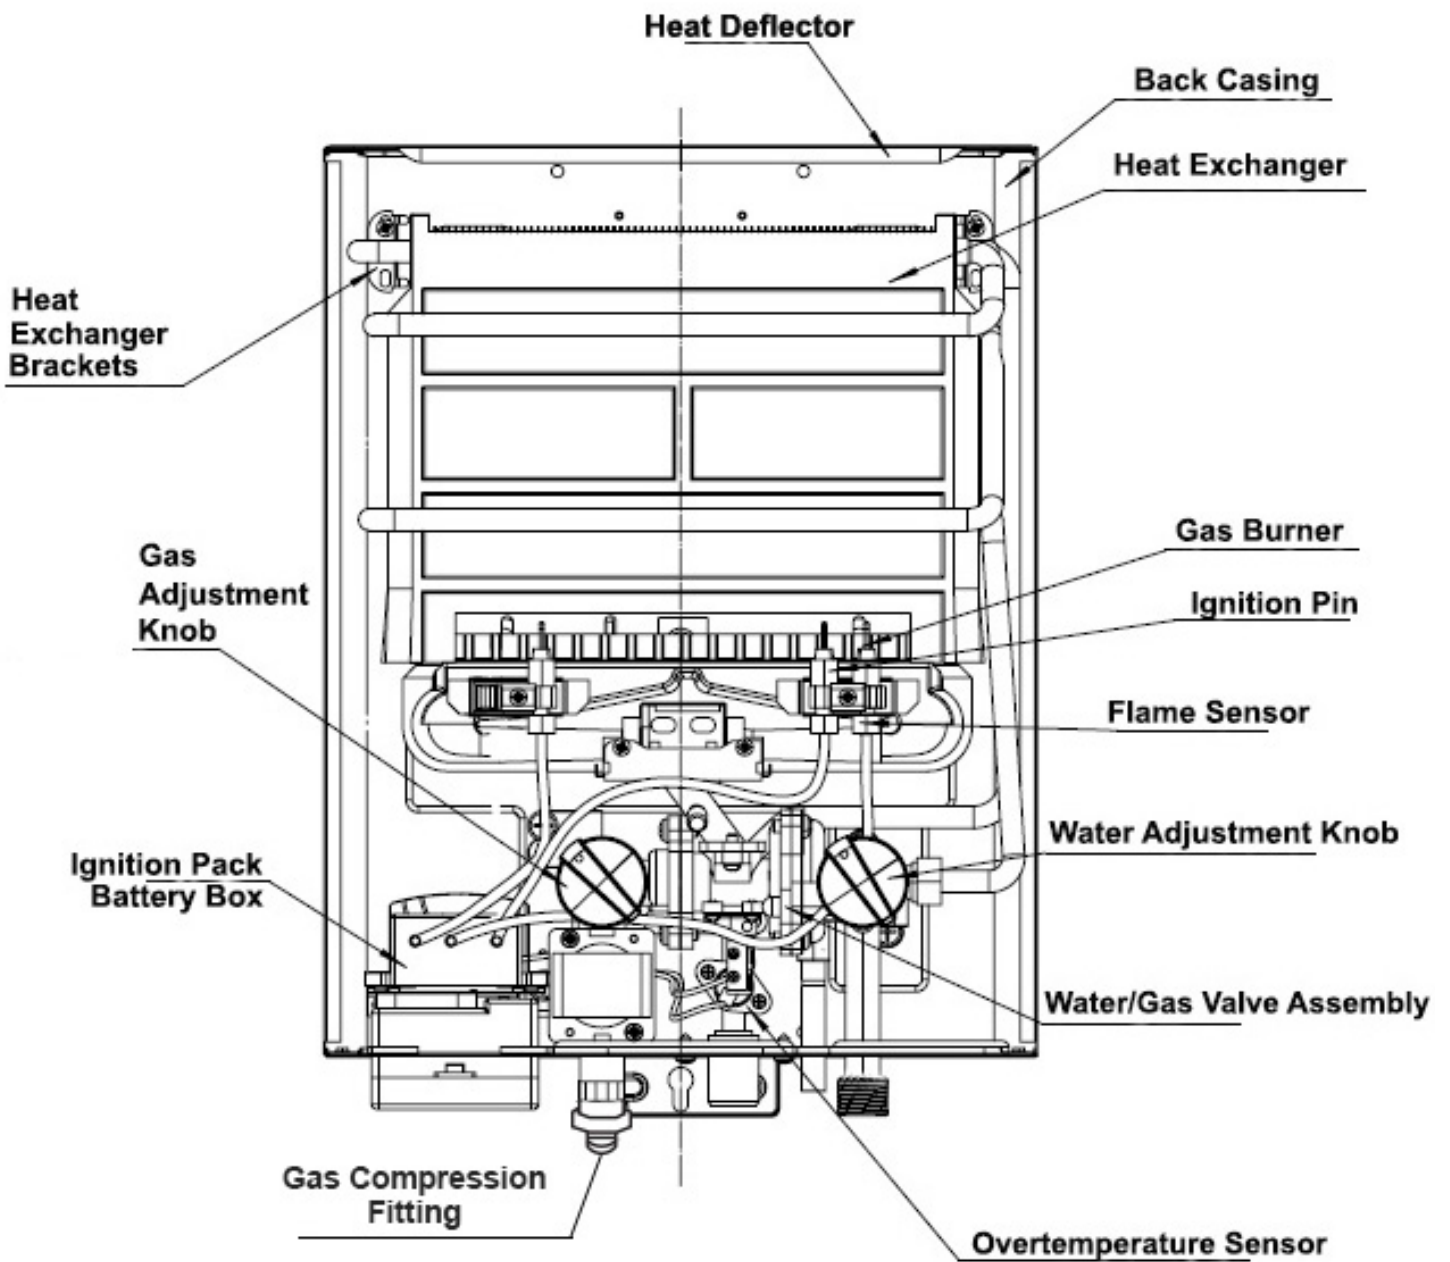

Care and Maintenance

6 MONTH CLEANING ROUTINE

To prevent water scale, lime or rust deposit buildup and ensure your Eccotemp tankless water heater is running as efficiently as possible it is highly recommended that you clean your Eccotemp tankless water heater every 6 months. To do this we recommend that you use our Eccotemp EZ-Flush System Descaler Kit.



⚠ DANGER: Before disconnecting the water supply, make certain no one will be exposed to the danger of the hot water released by disconnecting. The water may be hot enough to create a scald hazard. The water should be released into a suitable drain to prevent injury or property damage.

⚠ DANGER: Hotter water increases the potential for hot water scalds.

⚠ DANGER: Failure to perform the recommended routine preventative maintenance can harm the proper operation of this water heater, which can cause carbon monoxide dangers, excessive hot water temperatures and other potentially hazardous conditions.

Properly maintained, your water heater will provide years of dependable trouble-free service. It is recommended that a periodic inspection of the burner, water filter and top exhaust should be made by service personnel qualified in gas appliance repair.

It is suggested that a routine preventive maintenance program be established and followed by the user.

Inspect the area around the water heater to ensure a safe operating environment. Keep water heater area clear and free from combustible materials, gasoline, and other flammable vapors and liquids. Ensure the unit has not been damaged. If damage or denting is present, contact a service personnel to verify proper operation.

Check for any abnormal sounds during normal operation of the water heater.

All piping should be checked for gas and/or water leaks. Refer to page 4 of this manual for instructions on leak testing.

The air intake and cold water supply filters should be cleaned monthly. Refer to the "Housekeeping" section for further information.

DO NOT operate the water heater if you feel something is wrong with the unit.

DO NOT allow children to operate or otherwise handle the unit.

Housekeeping

HOW TO CLEAN THE WATER FILTER:

1. Make sure the unit is OFF
2. Disconnect the water supply from the water heater.
3. Locate the filter at the end of the water inlet pipe and gently remove with a screw driver.
4. Rinse the filter in a sink or with a hose to remove any debris.
5. Return the filter by gently inserting back into the end of the water inlet pipe.
6. Reconnect the water supply and turn ON the water heater.



Before performing any Housekeeping tasks to this water heater, be sure to turn the unit off and disconnect the water supply.

Vacuum around the water heater for dust, dirt and lint on a regular basis. Clean the water heater and front panel by using a damp soft cloth with a few drops of mild detergent and gently wiping the surfaces of the unit. Wipe any remaining moisture with a dry soft cloth.

To ensure sufficient ventilation and combustion air supply, proper clearances must be maintained. The water filters should be cleaned on a monthly basis.

STORAGE

When not in use your portable tankless water heater should be stored away in a climate controlled area. **WARNING:** Item should not be left or stored in freezing conditions. Internal damage can occur.

Upon completion of use prepare your water heater for storage.

1. Turn OFF water and gas supply and then disconnect from water heater.
2. Open the drain valve (ribbed cylindrical stem next to the water input valve) to ensure draining of water.
3. Remove the filter at the end of the water inlet pipe and clean. Return filter after cleaning. (see Housekeeping section above for instructions)
4. Store water heater in a climate controlled area.

Getting Started

1. Check box for damage. Damages caused in shipment must be reported immediately.
2. Make sure you have all the parts:

Please note: included parts and accessories may vary depending on country and regulations.



qty. 1 - Water heater



qty. 1 - Vent Shield



qty. 1 - Shower Nozzle and Hose



qty. 1 - 1/2" NPT to garden hose adapter



qty. 1 - Gas hose and regulator



qty. 1 - Hardware pack

All accessories come with a 30 day manufacturers warranty

3. If the vent shield is included in your model, attach the vent shield securely to the top of your portable tankless water heater by sliding the shield into the designated slots.
4. If using a standard garden hose, attach the 1/2" NPT to garden hose adapter to the fitting marked 'Water Input'. Use Sealant tape or other approved sealing method on the threads for a secure, water tight fit. Check to make sure the screen inside the water inlet is in place and clean. Then attach your water input/garden hose.
5. Install gas supply line and regulator to the portable tankless water heater by using 2 wrenches, one on the compression fitting already attached to the water heater and the other on the gas line. **DO NOT OVER TIGHTEN. OVER TIGHTING MAY CRACK THE GAS REGULATOR CAUSING A GAS LEAK!** Check for any gas leak before ignition! Make sure the gas connection is secured.
6. Attach the shower nozzle hose to the water output to the fitting marked 'Water Outlet.' Do not over tighten.
7. Install two D Cell batteries in the compartment on the bottom left of the heater. Check that batteries are facing the correct direction.
8. Use the top tab on the portable tankless water heater to suspend from a mounted screw capable of holding 30 pounds. Place at a comfortable height without putting stress on the gas hose. Do not use suspended from the handle! Do not permanently mount this portable tankless water heater!
9. Attach gas regulator with hose to the LP tank. Use hand pressure only on the plastic connector. **LEAVE GAS TANK VALVE IN THE "OFF" POSITION.**

Before going to the USE section:

Check around area for flammables, especially gasoline or other vapors which may ignite. The Exhaust and top of the portable tankless water heater will get HOT! Make sure there are no foreign objects around the portable tankless water heater or that have fallen into the top.

Use and Starting

Warning: This model is intended for recreational & portable use only. This model CANNOT be permanently mounted or plumbed in any way.

1. Turn on incoming water supply. Ensure that you have adequate water pressure between 20-80 PSI.
2. Turn your water output device to its "off" position.
3. Turn the gas valve on the cylinder all the way open.
4. **IF THE SMELL OF GAS IS DETECTED, TURN OFF THE GAS VALVE IMMEDIATELY!!**
5. Set the water regulator knob on the face of the portable tankless water heater to its highest setting.
6. Set the gas regulator knob on the face of the portable tankless water heater to its minimum setting.
7. Turn on your water output device to the "on" position and adjust to the desired water flow.
8. There will be a series of audible clicks and the burner will ignite. Should the burner not ignite after 5 seconds, shut off and go to the "Trouble Shooting" section.
9. Upon completion of use or storage, open the drain valve (ribbed cylindrical stem next to the water input valve) to ensure draining of water.
10. Turn off your gas supply.
11. **WARNING: If the outside temperature is around or below freezing (32 degrees F, 0 degrees C), ensure that the drain valve is opened and water drained from the portable tankless water heater after each use to avoid internal damage to the water regulator. You will also need to unhook the outgoing water line to ensure that any water in the heat exchanger is drained. Failure to properly drain your portable tankless water heater will cause water damage which may or may not be reparable.**

WARNING!

GAS HOSE ADAPTER

THE L5, L7,& L10 PORTABLE TANKLESS WATER HEATERS HAVE 1/2" TO 3/8" ADAPTER ALREADY ATTACHED TO THE GAS INLET ON THE WATER HEATER.

PLEASE ENSURE THE ADAPTER IS CORRECTLY INSTALLED WITH THREAD SEALANT. A SPOOL OF SEALANT TAPE IS INCLUDED WITH THE WATER HEATER.

MULTIPLE WRAPS OF SEALANT TAPE MAY BE NECESSARY TO ASSURE COMPLETE SEAL.

ALWAYS CHECK FOR GAS LEAKS BEFORE USING HEATER.

Adjustment

The temperature of the outgoing water is dependent on the temperature of the incoming water balanced with the amount of heat applied. Use extreme caution when setting the outlet water temperature.

1. With the water regulator set to high, and the gas regulator set to low, feel the outgoing water. This is the lowest setting available.
2. To initially raise the outgoing temperature, slowly turn the gas valve towards maximum. Adjust slowly and check the temperature often. There will be a slight delay between increasing the gas supply and the increase in water temperature.
3. Should the outlet water temperature need to be higher, slowly reduce the water flow regulator until desired temperature is reached.

(Warning: Do not alter or change this water heater's original temperature sensor)

WARNING: THE PORTABLE TANKLESS WATER HEATER IS CAPABLE OF PRODUCING SCALDING WATER TEMPERATURES!



DO NOT RETURN TO STORE

Troubleshooting

Portable tankless water heater will not start – there are no audible clicks at startup:

- a. The first thing to check is to ensure that the incoming water on the “right” side of the portable tankless water heater. If the incoming and outgoing are reversed, the portable tankless water heater will not work. The incoming is on the far right and the outgoing is in the middle.
- b. The “On/Off” switch should be with the “-” sign pushed down.
- c. Check to make sure you have fresh batteries and they are installed in the correct position.
- d. Number one reason that the portable tankless water heater does not ignite is that there is not enough water pressure. You need to make sure that you have a minimum of 20 PSI of sustained water pressure.

ADJUSTMENT: Looking up at the bottom of the portable tankless water heater, you will see 2 oval holes in the case. The hole that is furthest on the right looks up at the water regulator where you will see two Phillips head screws. Take the screw that is furthest on the right in about a 1/4 or 1/2 turn. This will enable the portable tankless water heater to operate on a lower water pressure by restricting flow.

- e. A wire has become disconnected inside the portable tankless water heater during shipping. Make sure the gas is OFF and the switch is in the OFF position. The front cover is held by four screws, two top, two bottom. The knobs pull off. All the wiring is done with push together plastic connectors. They are all visible without further dismantling of the portable tankless water heater. It should be obvious when a wire has become disconnected.

-
- f. It is possible that some debris or epoxy might have entered the water regulator. Check to see if the filter screen on the water inlet is clear of debris. You can also reverse the hookup by taking your water source and hooking it up to the water outlet side and back flushing the system.

Propane gas cylinders sometimes are contaminated with air, especially new tanks upon their first filling. Cycle the portable tankless water heater on and off by using the shower head switch several times (5) to purge the air from the gas.

Portable tankless water heater will not start – but there are audible clicks at startup:

- a. The portable tankless water heater requires a minimum of about 2 GPM and a minimum of about 25 PSI. Note: water pressure is at the lower end of operating parameters. You will need a sustained water pressure of approximately 40-60 PSI for adequate use if you are using a 12/18/120 volt pump. See adjustment in previous section.
- b. High Wind. For safety reasons the heater will not start in sustained wind, find an alternate location for the water heater.
- c. Out of, or low on gas. Propane gas cylinders sometimes are contaminated with air, especially new tanks upon their first filling. Cycle the portable tankless water heater on and off by using the shower head switch several times (5) to purge the air from the gas.

Troubleshooting Continued...

- d. One of the ignition sensors is bent and/or too close to the burner. Look to ensure that the ignition pins and the heat sensor are completely vertical and they do a 90 degree to the back of the box. If they are not straight (i.e. a 45 degree angle) then you can straighten them with pliers.
- e. The thermocouple is either too high or too low to complete the circuit. Check to ensure that the thermocouple is flush with the hole in the heat exchanger.
- f. The gas sensor wire might have come loose or is no longer connected.

The water does not get hot enough:

- a. You are operating the portable tankless water heater above 4,000 feet. While it has been field tested up to 5,500 feet, we only recommend using it below elevations of 4,000-5,500 feet.
- b. Look into the viewer panes (3 teardrop shaped windows on the front cover) to see if there is a blue flame. If the flame is yellow there could be a cracked gas regulator.

Water is flowing, but there is no hot water coming out:

- a. Ensure that you have the incoming water supply and the outgoing water supply hooked up properly. Your water supply should be attached to your incoming connection (located on the far right) and the shower head should be attached to the outgoing water (located as the center connection).
- b. Ensure that you have adequate water pressure of at least 20 PSI, sustained.
- c. Ensure that you have adequate gas in your propane bottle and that the LP regulator is threaded all of the way on to the portable tankless water heater.
- d. Fresh batteries are required for ignition spark. Make sure batteries are aligned in the proper polarity(+/-) Flat negative of battery towards spring side of battery compartment.

The portable tankless water heater does nothing:

- a. Ensure that you have your water source hooked up to the water inlet side (far right connection) and the shower handle is hooked up on the water outlet side (middle connection).
- b. Ensure that you have an adequate supply of propane.
- c. Ensure that you have fresh batteries.

PORTABLE PRODUCT COMPARISONS

L5



L7



L10



	L5	L7	L10
INSTALLATION	OUTDOOR ONLY	OUTDOOR ONLY	OUTDOOR ONLY
BTU	37,500	41,000	75,000
Flow Rate	Rated 1.5 GPM	Rated 1.6 GPM	Rated 2.65 GPM
Portable	Yes	Yes	Yes
Power Source	2 "D" Cell Batteries	2 "D" Cell Batteries	2 "D" Cell Batteries
Gas Type	Liquid Propane Only	Liquid Propane Only	Liquid Propane Only
Venting	None Needed	None Needed	None Needed
Water Pressure	20-80 PSI	20-80 PSI	25-80 PSI
Regulator & Hose	Standard / Included	Standard / Included	Standard / Included
Temperature Control	Manual 80° - 120°F	Manual 50° - 125°F	Manual 80° - 140°F
Warranty	1 Year	2 Years	1 Year
Product Dimensions	12" x 4.5" x 20" - 11.2 lbs	13.5" x 6.5" x 19.5" - 14.7 lbs	15" x 6.5" x 35" - 17.5 lbs
Package Dimensions	12.4" x 7.7" x 21.9" - 13.8 lbs	14" x 7.7" x 25.8" - 16 lbs	15.7" x 9.6" x 35.4" - 23.5 lbs

Eccotemp Systems ,LLC

Limited Warranty Information

EccoTemp hereby warrants this product to be free of material defects in materials and workmanship when installed and operated according to EccoTemp's installation and operating instructions. This Limited Warranty extends to the original purchaser and subsequent owners, but only while the product remains as the site of the original installation. This Limited Warranty terminates if moved or reinstalled at a new location. There are no warranties, express or implied made or given other than contained in this Limited Warranty. No agent, employee or representative of EccoTemp has any authority to bind EccoTemp to any representation or warranty concerning the Product not contained in this Limited Warranty.

Except as expressly set forth herein, THERE ARE NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, AS TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ANY GOODS SOLD HEREUNDER. BUYER'S EXCLUSIVE REMEDY IS LIMITED TO REPAIR OR REPLACEMENT OF THE GOODS SOLD, AT ECCOTEMP'S DISCRETION. ECCOTEMP SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Item Period of Coverage

Heat Exchanger 1 year

All other parts 1 year

Free Accessories (Showerhead,hose,regulator etc) 30 days

Coverages are void if the unit is used in a hot water circulation loop, in series with a circulation system or where an on-demand recirculation system is not incorporated.

Owner is responsible for all other costs incidental to repair such as labor, shipping, delivery and permits. Proof of purchase required. Products repaired will be covered under this Limited Warranty for the remainder of term of the original purchase.

This Limited Warranty becomes null and void if any of the following are determined to be a contributing factor to the failure of the product:

1. Abuse, misuse, alteration, neglect or misapplication;
2. Improper or inadequate maintenance;
3. Inadequate water quality;
4. Installation in a corrosive or otherwise destructive environment;
5. Freeze Damage;
6. Scale buildup;
7. Incorrect gas or water pressure;
8. Acts of force Majeure

This Product is not to be used as a pool or spa heater.

Shipping Related Costs:

Within the first 30 days of purchase, Eccotemp will cover all ground shipping costs for warranty related issues, excluding AK, HI, Canada, and any location outside of the continental US. After the first 30 days of purchase, Eccotemp will cover all shipping costs to the customer for warranty related issues, excluding AK, HI, Canada, and any location outside of the continental US. After the first 30 days of purchase, the customer is responsible for all shipping to Eccotemp, regardless of reason or circumstance. The method for warranty related shipping will be Ground equivalent with the provider of Eccotemp's choosing.

AK, HI, Canada, and any location outside of the continental US, will be responsible for all shipping costs, regardless of reason or circumstance.

All shipments of any type of product coming to Eccotemp for any reason must have an RGA for any repairs to be made. Please contact Eccotemp to obtain an RGA number prior to shipping anything to Eccotemp. Failure to do so could result in loss of product. Eccotemp will not be responsible for replacement due to loss or damage if these steps are not properly followed.